

1400 0007

2085

(52)

Item 7

2-5

MAGNETIC/VLF-EM SURVEY
on the
SK PROJECT
ELKO COUNTY, NEVADA
for
PEGASUS GOLD CORP.

Conducted by:
Great Basin Geophysical, Inc.
April, 1989

By: Joseph E. McKinney
Geophysicist

MAGNETIC/VLF-EM SURVEY
on the
SK PROJECT
APRIL, 1989

INTRODUCTION

A Magnetic/VLF-EM survey was conducted on the SK Project for Pegasus Gold Corp. during the period 21 April to 23 April, 1989. Eleven lines 6000 feet in length were surveyed with 50 foot station spacings in a N60E direction. This survey was conducted by J. E. McKinney, Geophysicist with Great Basin Geophysical, Inc.

INSTRUMENTATION

The equipment used for this survey was an EDA Omni Plus field magnetometer and VLF receiver with an EDA Omni 4 magnetometer base station. The field instrument measures the total magnetic field and the in phase, quadrature, total field and tilt VLF parameters. The base station samples the total magnetic field every 30 seconds and stores this data, which is later used to correct the field magnetic data for diurnal drift.

PROCEDURE

The eleven lines surveyed were 6000 feet long, spaced 500 feet apart and numbered 45N through 95N with a bearing of N60E. Readings were taken every 50 feet.

At the beginning of the day the base station is emplaced, then a point on the grid is occupied to initialize the field instrument. After initialization, the field survey is begun. At the end of the day repeat readings are taken on selected data points and on the initialization point. These repeats show the quality of the data and the drift corrections. Data quality is monitored during data acquisition, and suspect readings are repeated until convergence is attained.

The Vlf transmitter used for this survey is located at Jim Creek, Washington and operates at a frequency of 24.8 Hz.

DATA PRESENTATION

Magnetic data is presented as stacked profiles of the total magnetic field in gammas, corrected for diurnal drift, a contour map of the corrected total field, and a contour map of the corrected total field where the data have been filtered to remove a low frequency regional gradient.

VLF-EM data is presented as stacked profiles of the in-phase and quadrature components in per cent, stacked profiles of the VLF total field strength, and a contour map of the vertical in-phase where the data have been filtered with a Fraser filter. Fraser filtering is a mathematical process which turns crossovers into peaks that center over the proper crossover. It suppresses noise in the data, reverse crossovers, and long rolling responses.

The maps and profiles are plotted at a scale of 1" = 500' and are

included in Appendix I.

DATA QUALITY

Data quality for this survey is very good. Repeatability of the selected magnetic data points was generally within 1-2 gammas with a maximum difference of 9 gammas. The VLF data repeated to within 2 per cent for the in-phase and quadrature and within 2 for the total field strength.

PRELIMINARY INTERPRETATION

MAGNETIC

There is a Northwest trending anomaly in the southern half of the grid located near 3000 NE. This could possibly be due to a dike-like intrusive, but more geologic information is needed. This feature is either cut-off or intersected by a possible east-northeast trending structure defined by a step response approximately northwest of line 7000 N. In the extreme southeast portion of the grid is a northwest trending response in the vicinity of 5500 NE which may be a contact (lithologic or fault) as indicated by the change from a flat response to a high frequency response. This possible fault is also truncated by the east-northeast trending structure mentioned above.

There is a strong "regional" gradient increasing to the north.

The strong low frequency response at the north corner of the grid could be from a deep seated intrusive located off of the grid. This feature is truncated to the south by the east-northeast trending structure.

The general decrease in values toward the west north of line 7000 N is probably due to an increasing depth to bedrock, a result of thickening of the pediment cover in this region.

VLF-EM

The abundant geologic noise makes correlation between lines very difficult. Some responses are obviously real conductors and some are obviously topographic effects.

The apparently real conductors have a northwest trend and may represent fault structures, which may be intersected by the northwest trending structure as seen in the magnetic data. The most prominent of these conductors occur at 1500 NE, 3300 NE, and 5000 to 6000 NE.

LOGISTICS
20 April to 23 April, 1989

4/20 Travel from Reno to Wells, NV.

4/21 8:00 - leave for field, 9:30 - arrive field. Meet with project geologists, drive out to project, recon property, set up base station, read lines 65, 70, 75 and 80 N, take down base. 4:00 - leave field, 5:20 - arrive Wells.

4/22 7:50 - leave for field, 9:10 - arrive field. Set up base, read lines 45, 50, 55 and 60 N, take down base. 5:30 - leave field, 6:40 - arrive Wells.

4/23 8:30 - leave for field, 9:40 - arrive field. Set up base, read lines 85, 90 and 95 N. 4:00 - leave for Reno, NV.

1400 0007

3 of 5

(52)

Item 9
15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

3-5
5-Jan-88

BARRINGER LABORATORIES INC.
Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 6
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Abbreviations:

Analyses:

Ag	: Silver
As	: Arsenic
Au	: Gold
Bi	: Bismuth
Sb	: Antimony

Methods:

AA	: Atomic Absorption
FA	: Fire Assay

Units:

ppm	: Parts per Million
ppb	: Parts per Billion

Quality control:

*=Interference	<=less than
>=greater than	D=not Detected
I=Insufficient sample	M=Missing
N=Not analyzed	P=questionable Precision
T=Trace	

Signed:



Vernon K. Peterson
Laboratory Manager

HCL
15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1456 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 1
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883359R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-1 0-5	0.2	550	62	8	8
	WB-1 5-10	0.6	560	31	10	7
	WB-1 10-15	1.4	640	42	5	3
	WB-1 15-20	1.2	660	88	7	4
	WB-1 20-25	1.2	1350	76	25	3
	WB-1 25-30	1	3080	279	37	3
	WB-1 30-35	2	6500	959	19	10
	WB-1 35-40	2.6	9900	1233	309	50
	WB-1 40-45	16.8	7700	1712	1750	66
	WB-1 45-50	1.5	1200	152	39	3
	WB-1 50-55	0.8	530	131	57	1
	WB-1 55-60	0.2	336	92	10	< 1
	WB-1 60-65	0.4	293	83	22	< 1
	WB-1 65-70	0.2	110	44	11	< 1
	WB-1 70-75	0.1	93	45	26	< 1
	WB-1 75-80	0.1	106	52	25	< 1
	WB-1 80-85	0.1	43	19	6	< 1
	WB-1 85-90	0.1	94	29	12	< 1
	WB-1 90-95	0.1	75	32	8	< 1
	WB-1 95-100A	0.1	122	43	11	< 1
	WB-1 95-100B	<	0.1	68	10	< 1
	WB-1 100-105	0.1	57	20	6	< 1
	WB-1 105-110	0.1	70	1164	12	< 1
	WB-1 110-115	<	0.1	83	494	13
	WB-1 115-120	<	0.1	51	31	< 1
	WB-1 120-125	<	0.1	27	14	< 1
	WB-1 125-130	<	0.1	27	< 2	< 1
	WB-1 130-135	M	M	M	M	M
	WB-1 135-140	0.1	52	12	< 2	< 1
	WB-1 140-145	0.1	45	20	4	< 1

16000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89421
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883359R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-1 145-150	0.1	76	15	12	< 1
	WB-1 150-155	0.1	38	13	9	< 1
	WB-1 155-160	<	0.1	27	3	< 1
	WB-1 160-165	<	0.1	54	5	< 1
	WB-1 165-170	<	0.1	39	6	< 1
	WB-1 170-175	<	0.1	38	9	< 1
	WB-1 175-180	<	0.1	10	2	< 1
	WB-1 180-185	<	0.1	7	< 2	< 1
	WB-1 185-190	<	0.1	6	< 2	< 1
	WB-1 190-195	<	0.1	9	< 2	< 1
	WB-1 195-200A	<	0.1	6	< 2	< 1
	WB-1 195-200B	1	117	570	< 2	< 1
	WB-1 200-205	0.1	10	5	< 2	< 1
	WB-1 205-210	0.1	13	4	< 2	< 1
	WB-1 210-215	<	0.1	14	< 2	< 1
	WB-1 215-220	<	0.1	21	< 2	< 1
	WB-1 220-225	<	0.1	16	< 2	< 1
	WB-1 225-230	<	0.1	< 2	< 2	< 1
	WB-1 230-235	0.1	3	< 2	< 2	< 1
	WB-1 235-240	0.1	3	< 2	< 2	< 1
	WB-1 240-245	<	0.1	4	< 2	< 1
	WB-1 245-250	0.1	14	< 2	< 2	< 1
	WB-1 250-255	<	0.1	6	< 2	< 1
	WB-1 255-260	<	0.1	4	< 2	< 1
	WB-1 260-265	<	0.1	9	< 2	< 1
	WB-1 265-270	<	0.1	5	< 2	< 1
	WB-1 270-275	<	0.1	4	< 2	< 1
	WB-1 275-280	<	0.1	3	< 2	< 1
	WB-1 280-285	0.1	29	64	< 2	< 1
	WB-1 285-290	0.1	4	17	< 2	< 1



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1587

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 82431
PHONE: (702) 358-1158

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883359R

Type	Sample	Ag	As	Au	Bi	Sb	
		AA	AA	FA	AA	AA	
		ppm	ppm	ppb	ppm	ppm	
Cut	WB-1 290-295	< 0.1	4	6	< 2	< 1	
	WB-1 295-300A	< 0.1	3	5	< 2	< 1	
	WB-1 295-300B	< 0.1	< 2	< 2	< 2	< 1	



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502


Page: 1
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-2 0-5	0.1	15	< 2	< 2	< 1
	WB-2 5-10	0.1	76	< 2	< 2	< 1
	WB-2 10-15	0.2	63	< 2	< 2	< 1
	WB-2 15-20	0.2	67	< 2	< 2	< 1
	WB-2 20-25	0.1	13	< 2	< 2	< 1
	WB-2 25-30	0.1	20	< 2	< 2	< 1
	WB-2 30-35	0.2	21	< 2	< 2	< 1
	WB-2 35-40	0.1	16	< 2	< 2	< 1
	WB-2 40-45	0.3	19	< 2	< 2	< 1
	WB-2 45-50	< 0.1	14	< 2	< 2	< 1
	WB-2 50-55	0.1	10	< 2	< 2	< 1
	WB-2 55-60	0.1	20	< 2	< 2	< 1
	WB-2 60-65	0.1	5	< 2	< 2	< 1
	WB-2 65-70	0.1	7	< 2	< 2	< 1
	WB-2 70-75	< 0.1	8	< 2	< 2	< 1
	WB-2 75-80	0.1	11	< 2	< 2	< 1
	WB-2 80-85	< 0.1	12	< 2	< 2	< 1
	WB-2 85-90	0.2	17	< 2	< 2	< 1
	WB-2 90-95	< 0.1	11	< 2	< 2	< 1
	WB-2 95-100	< 0.1	6	< 2	< 2	< 1
	WB-2 100-105	< 0.1	4	< 2	< 2	< 1
	WB-2 105-110	< 0.1	7	< 2	< 2	< 1
	WB-2 110-115	< 0.1	4	< 2	< 2	< 1
	WB-2 115-120	0.1	7	< 2	< 2	< 1
	WB-2 120-125	0.1	6	< 2	< 2	< 1
	WB-2 125-130	< 0.1	11	< 2	< 2	< 1
	WB-2 130-135	0.1	10	< 2	< 2	< 1
	WB-2 135-140	< 0.1	26	< 2	< 2	< 1
	WB-2 140-145	< 0.1	18	< 2	< 2	< 1
	WB-2 145-150	< 0.1	10	< 2	< 2	< 1

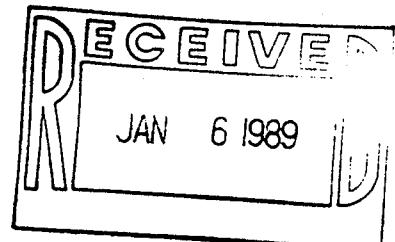



15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 2
Copy: 1 of 2
Set : 1

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-2 150-155	0.2	14	< 2	< 2	< 1
	WB-2 155-160	0.1	7	< 2	< 2	< 1
	WB-2 160-165	0.1	11	< 2	< 2	< 1
	WB-2 165-170	0.2	7	< 2	< 2	< 1
	WB-2 170-175	0.2	6	< 2	< 2	< 1
	WB-2 175-180	0.2	11	< 2	< 2	< 1
	WB-2 180-185	0.1	17	< 2	2	< 1
	WB-2 185-190	0.2	27	< 2	26	< 1
	WB-2 190-195	0.1	17	< 2	11	< 1
	WB-2 195-200	0.1	9	< 2	< 2	< 1
	WB-2 200-205	0.1	3	< 2	< 2	< 1
	WB-2 205-210	0.1	6	< 2	< 2	< 1
	WB-2 210-215	< 0.1	6	< 2	< 2	< 1
	WB-2 215-220	0.1	24	< 2	< 2	< 1
	WB-2 220-225	0.1	13	< 2	< 2	< 1
	WB-2 225-230	0.1	7	< 2	< 2	< 1
	WB-2 230-235	0.2	11	< 2	< 2	< 1
	WB-2 235-240	0.1	13	< 2	< 2	< 1
	WB-2 240-245	0.1	14	< 2	< 2	< 1
	WB-2 245-250	0.2	4	< 2	< 2	< 1
	WB-2 250-255	0.2	11	< 2	< 2	< 1
	WB-2 255-260	0.1	6	< 2	< 2	< 1
	WB-2 260-265	0.1	5	< 2	< 2	< 1
	WB-2 265-270	0.2	5	< 2	< 2	< 1
	WB-2 270-275	0.1	3	< 2	< 2	< 1
	WB-2 275-280	0.1	2	< 2	< 2	< 1
	WB-2 280-285	0.2	7	< 2	< 2	< 1
	WB-2 285-290	0.2	4	< 2	< 2	< 1
	WB-2 290-295	0.1	8	< 2	< 2	< 1
	WB-2 295-300	0.2	10	< 2	< 2	< 1



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-2 300-305	0.2	18	< 2	< 2	< 1
	WB-2 305-310	0.1	6	< 2	< 2	< 1
	WB-2 310-315	0.1	10	< 2	< 2	< 1
	WB-2 315-320	< 0.1	14	< 2	< 2	< 1
	WB-2 320-325	0.1	29	< 2	< 2	< 1
	WB-2 325-330	0.1	19	< 2	< 2	< 1
	WB-2 330-335	0.2	25	< 2	< 2	< 1
	WB-2 335-340	0.2	9	< 2	< 2	< 1
	WB-2 340-345	0.1	13	< 2	< 2	< 1
	WB-2 345-350	< 0.1	12	< 2	< 2	< 1
	WB-2 350-355	0.1	7	< 2	< 2	< 1
	WB-2 355-360	0.1	3	< 2	< 2	< 1
	WB-2 360-365	< 0.1	4	< 2	< 2	< 1
	WB-2 365-370	< 0.1	8	< 2	< 2	< 1
	WB-2 370-375	< 0.1	11	< 2	< 2	< 1
	WB-2 375-380	< 0.1	48	< 2	< 2	< 1
	WB-2 380-385	< 0.1	64	< 2	< 2	< 1
	WB-2 385-390	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 0-5	< 0.1	71	< 2	3	< 1
	WB-2A 5-10	< 0.1	65	12	9	< 1
	WB-2A 10-15	< 0.1	56	18	8	< 1
	WB-2A 15-20	< 0.1	46	33	5	< 1
	WB-2A 20-25	< 0.1	78	132	6	< 1
	WB-2A 25-30	< 0.1	32	99	5	< 1
	WB-2A 30-35	< 0.1	22	23	< 2	< 1
	WB-2A 35-40	< 0.1	37	47	4	< 1
	WB-2A 40-45	< 0.1	73	31	29	< 1
	WB-2A 45-50	< 0.1	34	6	4	< 1
	WB-2A 50-55	< 0.1	32	< 2	22	< 1
	WB-2A 55-60	< 0.1	46	< 2	9	< 1



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-2A 60-65	< 0.1	16	< 2	3	< 1
	WB-2A 65-70	< 0.1	13	< 2	2	< 1
	WB-2A 70-75	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 75-80	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 80-85	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 85-90	< 0.1	3	< 2	< 2	< 1
	WB-2A 90-95	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 95-100A	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 95-100B	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 100-105	< 0.1	3	< 2	< 2	< 1
	WB-2A 105-110	< 0.1	3	< 2	< 2	< 1
	WB-2A 110-115	< 0.1	14	< 2	< 2	< 1
	WB-2A 115-120	< 0.1	9	< 2	< 2	< 1
	WB-2A 120-125	< 0.1	3	< 2	< 2	< 1
	WB-2A 125-130	< 0.1	3	< 2	< 2	< 1
	WB-2A 130-135	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 135-140	< 0.1	4	< 2	< 2	< 1
	WB-2A 140-145	< 0.1	3	< 2	< 2	< 1
	WB-2A 145-150	< 0.1	7	< 2	< 2	< 1
	WB-2A 150-155	< 0.1	7	< 2	< 2	< 1
	WB-2A 155-160	< 0.1	5	< 2	< 2	< 1
	WB-2A 160-165	< 0.1	6	< 2	< 2	< 1
	WB-2A 165-170	< 0.1	9	< 2	< 2	< 1
	WB-2A 170-175	< 0.1	13	< 2	< 2	< 1
	WB-2A 175-180	< 0.1	51	< 2	< 2	< 1
	WB-2A 180-185	< 0.1	72	22	< 2	< 1
	WB-2A 185-190	< 0.1	70	9	< 2	< 1
	WB-2A 190-195	< 0.1	10	< 2	< 2	< 1
	WB-2A 195-200A	< 0.1	20	< 2	< 2	< 1



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 5
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Type	Sample	Ag		As		Au		Bi		Sb	
		AA	ppm	AA	ppm	FA	ppb	AA	ppm	AA	ppm
Cut	WB-2A 195-200B	<	0.1	18	<	2	<	2	<	1	
	WB-2A 200-205		0.6	106		571		<	2		5
	WB-2A 205-210	<	0.1	28	<	2	<	2	<	1	
	WB-2A 210-215	<	0.1	77		22		4	<	1	
	WB-2A 215-220	<	0.1	51		14		3	<	1	
	WB-2A 220-225	<	0.1	52		17		4	<	1	
	WB-2A 230-235	<	0.1	10	<	2		<	2	<	1
	WB-2A 235-240	<	0.1	8	<	2		<	2	<	1
	WB-2A 240-245	<	0.1	21	<	2		<	2	<	1
	WB-2A 245-250	<	0.1	32	<	2		<	2	<	1
	WB-2A 250-255	<	0.1	25	<	2		<	2	<	1
	WB-2A 255-260	<	0.1	169	<	2		5	<	1	
	WB-2A 260-265	<	0.1	56	<	2		3	<	1	
	WB-2A 265-270	<	0.1	50		15		4	<	1	
	WB-2A 270-275	<	0.1	377		21		4	<	1	
	WB-2A 275-280	<	0.1	112	<	2		8	<	1	
	WB-2A 280-285	<	0.1	36	<	2		3	<	1	
	WB-2A 285-290	<	0.1	11	<	2		2	<	1	
	WB-2A 290-295	<	0.1	8	<	2		2	<	1	
	WB-2A 295-300A	<	0.1	16	<	2		2	<	1	
	WB-2A 295-300B	<	0.1	< 2	<	2		<	2	<	1
	WB-2A 225-230	<	0.1	22	<	2		<	2	<	1



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502


Page: 1
Copy: 1 of 2
Set : 1

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883372R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-3 0-5	< 0.1	53	< 2	< 2	< 1
	WB-3 5-10	< 0.1	124	23	3	< 1
	WB-3 10-15	< 0.1	75	9	3	< 1
	WB-3 15-20	< 0.1	87	3	6	< 1
	WB-3 20-25	< 0.1	43	4	4	< 1
	WB-3 25-30	0.1	42	< 2	< 2	< 1
	WB-3 30-35	< 0.1	65	< 2	3	< 1
	WB-3 35-40	< 0.1	55	< 2	8	< 1
	WB-3 40-45	< 0.1	7	< 2	2	< 1
	WB-3 45-50	< 0.1	48	< 2	< 2	< 1
	WB-3 50-55	< 0.1	19	< 2	< 2	< 1
	WB-3 55-60	< 0.1	17	< 2	< 2	< 1
	WB-3 60-65	< 0.1	19	< 2	< 2	< 1
	WB-3 65-70	< 0.1	13	< 2	< 2	< 1
	WB-3 70-75	< 0.1	21	< 2	< 2	< 1
	WB-3 75-80	< 0.1	11	< 2	< 2	< 1
	WB-3 80-85	< 0.1	< 2	< 2	< 2	< 1
	WB-3 85-90	< 0.1	< 2	< 2	< 2	< 1
	WB-3 90-95	< 0.1	3	< 2	< 2	< 1
	WB-3 95-100A	< 0.1	< 2	< 2	< 2	< 1
	WB-3 95-100B	< 0.1	< 2	< 2	< 2	< 1
	WB-3 100-105	< 0.1	< 2	< 2	< 2	< 1
	WB-3 105-110	< 0.1	8	< 2	4	< 1
	WB-3 110-115	< 0.1	< 2	< 2	< 2	< 1
	WB-3 115-120	< 0.1	< 2	< 2	< 2	< 1
	WB-3 120-125	< 0.1	7	< 2	< 2	< 1
	WB-3 125-130	< 0.1	4	< 2	< 2	< 1
	WB-3 130-135	< 0.1	7	< 2	< 2	< 1
	WB-3 135-140	< 0.1	< 2	< 2	< 2	< 1
	WB-3 140-145	< 0.1	< 2	< 2	< 2	< 1

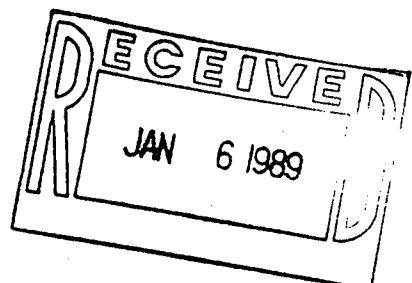



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 2
Copy: 1 of 2
Set : 1

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883372R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-3 145-150	< 0.1	< 2	< 2	< 2	< 1
	WB-3 150-155	0.1	6	< 2	< 2	< 1
	WB-3 155-160	< 0.1	< 2	< 2	< 2	< 1
	WB-3 160-165	0.1	< 2	< 2	< 2	< 1
	WB-3 165-170	0.1	< 2	< 2	< 2	< 1
	WB-3 170-175	< 0.1	< 2	< 2	< 2	< 1
	WB-3 175-180	0.1	4	< 2	< 2	< 1
	WB-3 180-185	0.2	3	< 2	< 2	< 1
	WB-3 185-190	< 0.1	3	< 2	< 2	< 1
	WB-3 190-195	< 0.1	4	< 2	< 2	< 1
	WB-3 195-200A	0.1	5	< 2	< 2	< 1
	WB-3 195-200B	1.1	100	488	< 2	3
	WB-3 200-205	< 0.1	3	< 2	< 2	< 1
	WB-3 205-210	< 0.1	< 2	< 2	< 2	< 1
	WB-3 210-215	< 0.1	< 2	< 2	< 2	< 1
	WB-3 215-220	< 0.1	15	< 2	< 2	< 1
	WB-3 220-225	< 0.1	14	< 2	< 2	< 1
	WB-3 225-230	< 0.1	7	< 2	< 2	< 1
	WB-3 230-235	< 0.1	3	< 2	< 2	< 1
	WB-3 235-240	0.1	6	< 2	< 2	< 1
	WB-3 240-245	< 0.1	6	< 2	< 2	< 1
	WB-3 245-250	< 0.1	7	< 2	< 2	< 1
	WB-3 250-255	< 0.1	< 2	< 2	< 2	< 1
	WB-3 255-260	0.1	< 2	< 2	< 2	< 1
	WB-3 260-265	< 0.1	4	< 2	< 2	< 1
	WB-3 265-270	< 0.1	< 2	< 2	< 2	< 1
	WB-3 270-275	< 0.1	4	< 2	< 2	< 1
	WB-3 275-280	< 0.1	3	< 2	< 2	< 1
	WB-3 280-285	< 0.1	< 2	< 2	< 2	< 1
	WB-3 285-290	< 0.1	< 2	< 2	< 2	< 1



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883372R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-3 290-295	< 0.1	4	< 2	< 2	< 1
	WB-3 295-300A	0.1	< 2	< 2	< 2	< 1
	WB-3 295-300B	< 0.1	< 2	< 2	< 2	< 1
	WB-3 300-305	< 0.1	3	< 2	< 2	< 1
	WB-3 305-310	< 0.1	< 2	< 2	< 2	< 1
	WB-3 310-315	< 0.1	8	< 2	< 2	< 1
	WB-3 315-320	0.1	< 2	< 2	< 2	< 1
	WB-3 320-325	M	M	M	M	M
	WB-3 325-330	M	M	M	M	M
	WB-3 330-335	M	M	M	M	M
	WB-3 335-340	M	M	M	M	M
	WB-4 140-145	< 0.1	26	< 2	< 2	< 1
	WB-4 145-150	0.1	26	23	< 2	< 1
	WB-4 150-155	< 0.1	30	8	< 2	< 1
	WB-4 155-160	0.1	84	72	5	< 1
	WB-4 160-165	0.1	37	19	3	< 1
	WB-4 165-170	< 0.1	22	10	2	< 1
	WB-4 170-175	< 0.1	62	17	< 2	< 1
	WB-4 175-180	0.1	25	4	< 2	< 1
	WB-4 180-185	< 0.1	38	3	2	< 1
	WB-4 185-190	< 0.1	71	17	< 2	< 1
	WB-4 190-195	< 0.1	9	5	< 2	< 1
	WB-4 195-200A	< 0.1	12	< 2	< 2	< 1
	WB-4 195-200B	1	95	483	< 2	5
	WB-4 200-205	< 0.1	15	8	< 2	< 1
	WB-4 205-210	< 0.1	12	< 2	5	< 1
	WB-4 210-215	< 0.1	21	< 2	< 2	< 1
	WB-4 215-220	0.1	39	< 2	2	< 1
	WB-4 220-225	0.1	23	< 2	< 2	< 1
	WB-4 225-230	< 0.1	29	< 2	< 2	< 1

12-Dec-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 1
Copy: 1 of 1
Set: 1

Authority: Anthony Longo
Project :

Purchase order :

[REDACTED] report: job number 883276R

Final

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Hg HYG ppb	Sb AA ppm	Te AA ppm
Cut	-WB4 0-5	0.1	165	.028	3	142	< 1	< 0.1
	-WB4 5-10	0.1	203	.026	9	100	< 1	< 0.1
	-WB4 10-15	0.2	850	.061	9	71	< 1	< 0.1
	-WB4 15-20	0.1	1200	.086	10	41	< 1	< 0.1
	-WB4 20-25	<	0.1	.021	7	65	< 1	< 0.1
	-WB4 25-30	0.1	268	.023	9	65	< 1	0.1
	-WB4 30-35	0.2	890	.454	16	47	< 1	0.2
	-WB4 35-40	0.1	580	.239	11	83	< 1	0.2
	-WB4 40-45	0.5	2100	1.096	210	53	< 1	0.1
	-WB4 45-50	0.1	1210	.259	28	71	< 1	0.3
10	-WB4 50-55	0.1	630	.566	11	95	< 1	0.2
	-WB4 55-60	0.2	410	.307	6	154	< 1	0.1
	-WB4 60-65	0.2	240	.354	6	112	< 1	0.4
	-WB4 65-70	<	0.1	.220	124	59	< 1	0.3
	-WB4 70-75	<	0.1	.219	.012	2	77	< 1
	-WB4 75-80	<	0.1	.99	.016	2	77	< 1
	-WB4 80-85	0.1	154	.140	2	65	< 1	0.2
	-WB4 85-90	<	0.1	50	.087	2	71	1
	-WB4 90-95	<	0.1	590	.076	4	59	< 1
	-WB4 95-100A	0.5	2100	.721	7	65	< 1	1
9	-WB4 95-100B	0.1	83	.008	Blank	77	< 1	0.1
	-WB4 100-105	0.6	2160	.364	12	59	< 1	1.8
	-WB4 105-110	0.7	2050	.890	14	89	< 1	0.7
	-WB4 110-115	0.1	268	.052	3	100	< 1	0.2
	-WB4 115-120	0.2	148	.580	14	83	< 1	0.5
	-WB4 120-125	0.1	265	.216	7	71	< 1	0.4
	-WB4 125-130	0.1	101	.119	4	65	< 1	0.2
	-WB4 130-135	<	0.1	.66	.031	3	95	< 1
	-WB4 135-140	0.3	910	.417	51	71	< 1	0.3
								< 0.1

1
27
29
56

32
29
61



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 1 of 2
Set : 1

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883372R

Type	Sample	Ag	As	Au	Bi	Sb
		AA ppm	AA ppm	FA ppb	AA ppm	AA ppm
Cut	WB-4 230-235	0.2	43	142	5	< 1
	WB-4 235-240	0.2	29	12	3	< 1
	WB-4 240-245	< 0.1	29	21	5	.< 1
	WB-4 245-250	< 0.1	28	24	3	< 1
	WB-4 250-255	< 0.1	32	< 2	6	< 1
	WB-4 255-260	0.1	40	< 2	4	1
	WB-4 260-265	0.1	29	< 2	3	< 1
	WB-4 265-270	0.1	.59	< 2	5	< 1
	WB-4 270-275	< 0.1	29	< 2	< 2	< 1
	WB-4 275-280	< 0.1	27	< 2	< 2	< 1
	WB-4 280-285A	0.1	26	26	57	< 1
	WB-4 280-285B	< 0.1	< 2	< 2	< 2	< 1
	WB-4 285-290	0.1	19	13	25	< 1



BARRINGER LABORATORIES INC.

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1465 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 1
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883375R

Type	Sample	Ag AA	As AA	Au FA	Bi AA	Sb AA
		ppm	ppm	ppb	ppm	ppm
Cut	WB5-5 0-5	<	0.1	31	41	3
	WB5-5 5-10		0.1	47	17	<
	WB5-5 10-15		0.1	33	27	<
	WB5-5 15-20		0.1	16	6	<
	WB5-5 20-25		0.1	63	< 2	19
	WB5-5 25-30		0.1	123	6	6
	WB5-5 30-35	<	0.1	60	10	< 2
	WB5-5 35-40	<	0.1	54	14	< 2
	WB5-5 40-45		0.1	74	30	< 2
	WB5-5 45-50		0.1	73	22	3
	WB5-5 50-55	<	0.1	42	16	3
	WB5-5 55-60	<	0.1	40	9	< 2
	WB5-5 60-65	<	0.1	52	< 5	< 2
	WB5-5 65-70	<	0.1	36	< 2	< 2
	WB5-5 70-75		0.1	83	12	5
	WB5-5 75-80		0.1	30	8	3
	WB5-5 80-85		0.1	28	25	3
	WB5-5 85-90		0.2	39	29	3
	WB5-5 90-95		0.8	265	272	9
	WB5-5 95-100A		0.2	83	67	10
	WB5-5 95-100B	<	0.1	< 2	3	< 2
	WB5-5 100-105		0.1	105	58	4
	WB5-5 105-110		0.2	72	151	2
	WB5-5 110-115		0.1	134	31	4
	WB5-5 115-120		0.1	68	13	2
	WB5-5 120-125		0.2	72	40	4
	WB5-5 125-130		0.2	123	137	6
	WB5-5 130-135		0.3	132	136	6
	WB5-5 135-140	<	0.1	79	19	2
	WB5-5 140-145	<	0.1	49	77	< 2



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 368-1186

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 2
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883375R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB5-5 145-150	0.1	590	181	< 2	< 1
	WB5-5 150-155	< 0.1	560	153	< 2	< 1
	WB5-5 155-160	0.2	351	465	11	< 1
	WB5-5 160-165	0.2	209	162	67	< 1
	WB5-5 165-170	0.1	104	89	20	< 1
	WB5-5 170-175	< 0.1	83	20	7	< 1
	WB5-5 175-180	< 0.1	35	22	< 2	< 1
	WB5-5 180-185	0.1	53	24	< 2	< 1
	WB5-5 185-190	0.1	44	18	2	< 1
	WB5-5 190-195	0.3	92	56	7	< 1
	WB5-5 195-200A	0.4	233	445	9	< 1
	WB5-5 195-200B	1	118	601	< 2	6
	WB5-5 200-205	0.2	110	90	4	< 1
	WB5-5 205-210	0.4	490	1199	37	< 1
	WB5-5 210-215	0.7	640	471	79	< 1
	WB5-5 215-220	0.8	690	2192	75	< 1
	WB5-5 220-225	0.2	106	183	32	< 1
	WB5-5 225-230	< 0.1	30	150	11	< 1
	WB5-5 230-235	< 0.1	31	87	8	< 1
	WB5-5 235-240	< 0.1	12	240	< 2	< 1
	WB5-5 240-245	< 0.1	23	51	4	< 1
	WB5-5 245-250	< 0.1	29	67	7	< 1
	WB5-5 250-255	< 0.1	15	242	6	< 1
	WB5-5 255-260	< 0.1	4	97	< 2	< 1
	WB5-5 260-265	< 0.1	5	97	< 2	< 1
	WB5-5 265-270	0.1	13	23	4	< 1
	WB5-5 270-275	< 0.1	8	15	4	< 1
	WB5-5 275-280	< 0.1	7	46	3	< 1
	WB5-5 280-285	< 0.1	6	31	3	< 1
	WB5-5 285-290	< 0.1	6	4	5	< 1

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1667

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883375R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB5-5 290-295	< 0.1	< 2	5	5	< 1
	WB5-5 295-300A	< 0.1	3	72	< 2	< 1
	WB5-5 295-300B	< 0.1	< 2	3	< 2	< 1
	WB5-5 300-305	< 0.1	7	8	< 2	< 1
	WB5-5 305-310	0.1	15	21	2	< 1
	WB5-5 310-315	0.1	32	28	5	< 1
	WB5-5 315-320	0.1	15	13	2	< 1
	WB5-5 320-325	< 0.1	15	< 2	< 2	< 1
	WB5-5 325-330	0.2	60	7	< 2	< 1
	WB5-5 330-335	0.2	30	9	< 2	< 1
	WB5-5 335-340		0.3	18	2	< 1
	WB5-5 340-345	<	0.1	16	4	< 1
	WB5-5 345-350	<	0.1	31	6	< 1
	WB5-5 350-355	<	0.1	28	22	< 1
	WB5-5 355-360	<	0.1	42	56	< 1
	WB5-5 360-365	<	0.1	59	125	11
	WB5-5 365-370	<	0.1	73	72	< 1
	WB5-5 370-375	<	0.1	45	3	< 1
	WB5-5 375-380	<	0.1	205	2	< 1
	WB5-5 380-385	<	0.1	66	68	20
	WB5-5 385-390	<	0.1	16	3	< 1
	WB5-5 390-395	<	0.1	57	< 2	6
	WB5-5 395-400A	<	0.1	40	< 2	5
	WB5-5 395-400B	0.9	129	640	< 2	7
	WB5-5 400-405	<	0.1	35	7	< 1
	WB5-5 405-410	<	0.1	29	31	< 1
	WB5-5 410-415	<	0.1	50	< 2	< 1
	WB5-5 415-420	<	0.1	38	< 2	< 1
	WB5-5 420-425	<	0.1	65	< 2	< 1
	WB5-5 425-430	<	0.1	45	< 2	< 1

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS NEVADA 89431
PHONE (702) 358-1158

BARRINGER LABORATORIES INC.

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883375R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB5-5 430-435	< 0.1	21	< 2	< 2	< 1
	WB5-5 435-440	< 0.1	59	9	8	< 1
	WB5-5 440-445	< 0.1	20	7	5	< 1
	WB5-5 445-450	< 0.1	11	6	4	< 1
	WB5-5 450-455	< 0.1	10	2	< 2	< 1
	WB5-5 455-460	< 0.1	14	8	< 2	< 1
	WB5-5 460-465	< 0.1	15	11	10	< 1
	WB5-5 465-470	< 0.1	7	13	6	< 1
	WB5-5 470-475	< 0.1	7	< 2	2	< 1
	WB5-5 475-480	< 0.1	22	135	15	< 1
	WB5-5 480-485	< 0.1	15	10	9	< 1
	WB5-5 485-490	< 0.1	18	< 2	< 2	< 1
	WB5-5 490-495	< 0.1	6	< 2	< 2	< 1
	WB5-5 495-500A	< 0.1	10	< 2	< 2	< 1
	WB5-5 495-500B	< 0.1	< 2	< 2	< 2	< 1



BARRINGER LABORATORIES INC.

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1697

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 1
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-7 0-5	23	<2
	WB-7 5-10	25	<2
	WB-7 10-15	24	<2
	WB-7 15-20	23	<2
	WB-7 20-25	28	<2
	WB-7 25-30	26	<2
	WB-7 30-35	22	<2
	WB-7 35-40	17	<2
	WB-7 40-45	19	<2
	WB-7 45-50	17	<2
	WB-7 50-55	6	<2
	WB-7 55-60	13	<2
	WB-7 60-65	12	<2
	WB-7 65-70	11	<2
	WB-7 70-75	12	140
	WB-7 75-80	11	<2
	WB-7 80-85	20	<2
	WB-7 85-90	13	<2
	WB-7 90-95	14	<2
	WB-7 95-100	10	<2
	WB-7 100-105	13	<2
	WB-7 105-110	15	<2
	WB-7 110-115	13	<2
	WB-7 115-120	11	<2
	WB-7 120-125	15	<2
	WB-7 125-130	14	<2
	WB-7 130-135	9	<2
	WB-7 135-140	9	<2
	WB-7 140-145	6	<2

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1667

1465 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 368-1159

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

20-Jun-89

Page: 2
Copy: 1 of 2
Set : 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-7 145-150	10	<2
	WB-7 150-155	7	<2
	WB-7 155-160	8	<2
	WB-7 160-165	10	<2
	WB-7 165-170	6	<2
	WB-7 170-175	7	<2
	WB-7 175-180	8	<2
	WB-7 180-185	10	<2
	WB-7 185-190	5	<2
	WB-7 190-195	5	<2
	WB-7 195-200	9	<2
	WB-7 200-205	8	<2
	WB-7 205-210	5	<2
	WB-7 210-215	6	<2
	WB-7 215-220	4	<2
	WB-7 220-225	6	<2
	WB-7 225-230	6	<2
	WB-7 230-235	6	<2
	WB-7 235-240	7	<2
	WB-7 240-245	7	<2
	WB-7 245-250	6	<2
	WB-7 250-255	5	<2
	WB-7 255-260	8	<2
	WB-7 260-265	5	<2
	WB-7 265-270	3	<2
	WB-7 270-275	5	<2
	WB-7 275-280	4	<2
	WB-7 280-285	5	<2
	WB-7 285-290	5	<2



BARRINGER LABORATORIES INC.

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 358-1159

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-7 290-295	5	<2
	WB-7 295-300	4	<2
	WB-7 300-305	3	<2
	WB-7 305-310	<2	<2
	WB-7 310-315	4	<2
	WB-7 315-320	<2	<2
	WB-7 320-325	4	<2
	WB-7 325-330	9	<2
	WB-7 330-335	4	<2
	WB-7 335-340	5	<2
	WB-7 340-345	3	<2
	WB-7 345-350	4	<2
	WB-7 350-355	6	<2
	WB-7 355-360	4	<2
	WB-7 360-365	7	<2
	WB-7 365-370	4	<2
	WB-7 370-375	<2	<2
	WB-7 375-380	3	<2
	WB-7 380-385	4	<2
	WB-7 385-390	3	<2
	WB-7 390-395	<2	<2
	WB-12 225-230	6	<2
	WB-12 230-235	5	<2
	WB-12 235-240	3	<2
	WB-12 240-245	8	<2
	WB-12 245-250	2	<2
	WB-12 250-255	5	<2
	WB-12 255-260	5	<2
	WB-12 260-265	3	<2

1406 14 89 - 05:01 PM *Barringer Labs, Inc. File

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1468 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1168

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

14-Jun-89

Page: 1
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : Sk

Purchase order :

Job: 89880R

Status: Final

Type	Sample	As ppm	Au ppb
		AA	FA
Cut	WB-8 0-5	5	<2
	WB-8 5-10	6	3
	WB-8 10-15	49	2
	WB-8 15-20	3	<2
	WB-8 20-25	70	6
	WB-8 25-30	6	<2
	WB-8 30-35	9	4
	WB-8 35-40	<2	8
	WB-8 40-45	<2	2
	WB-8 45-50	<2	<2
	WB-8 50-55	4	5
	WB-8 55-60	27	3
	WB-8 60-65	14	<2
	WB-8 65-70	22	<2
	WB-8 70-75	20	<2
	WB-8 75-80	12	<2
	WB-8 80-85	13	<2
	WB-8 85-90	8	<2
	WB-8 90-95	4	2
	WB-8 95-100	2	4
	WB-8 100-105	4	<2
	WB-8 105-110	<2	<2
	WB-8 110-115	<2	<2
	WB-8 115-120	<2	<2
	WB-8 120-125	<2	<2
	WB-8 125-130	6	3
	WB-8 130-135	<2	<2
	WB-8 135-140	13	<2
	WB-8 140-145	5	<2

APR 14 1989 00:00 PM BARRINGER LABS, INC. FILE

18000 W. 5TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1485 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 259-1150

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

14-Jun-89

Page: 2
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski

Project : SK

Purchase order :

Job: 89880R

Status: Final

Type	Sample	ppm	ppb
Cut	WB-8 145-150	16	5
	WB-8 150-155	18	4
	WB-8 155-160	9	7
	WB-8 160-165	20	4
	WB-8 165-170	3	3
	WB-8 170-175	9	4
	WB-8 175-180	13	5
	WB-8 180-185	8	<2
	WB-8 185-190	3	<2
	WB-8 190-195	2	<2
	WB-8 195-200	<2	<2
	WB-8 200-205	<2	<2
	WB-8 205-210	<2	2
	WB-8 210-215	<2	<2
	WB-8 215-220	<2	<2
	WB-8 220-225	<2	<2
	WB-8 225-230	<2	<2
	WB-8 230-235	<2	<2
	WB-8 235-240	<2	<2
	WB-8 240-245	<2	<2
	WB-8 245-250	<2	<2
	WB-8 250-255	<2	<2
	WB-8 255-260	<2	<2
	WB-8 260-265	<2	<2
	WB-8 265-270	<2	<2
	WB-8 270-275	<2	<2
	WB-8 275-280	<2	<2
	WB-8 280-285	<2	<2
	WB-8 285-290	<2	<2



BARRINGER LABORATORIES INC.

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1456 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 368-1158

14-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski

Project : Sk

Purchase order :

Job: 89880R

Status: Final

Type	Sample	RPM	ppb	As	Au
				AA	FA
Cut	WB-8 290-295	<2	<2		
	WB-8 295-300	<2	<2		
	WB-8 300-305	<2	<2		
	WB-8 305-310	<2	<2		
	WB-8 310-315	<2	<2		
	WB-8 315-320	<2	<2		
	WB-8 320-325	<2	<2		
	WB-8 325-330	<2	<2		
	WB-8 330-335	<2	<2		
	WB-8 335-340	<2	<2		
	WB-8 340-345	<2	<2		
	WB-8 345-350	<2	<2		
	WB-8 350-355	<2	<2		
	WB-8 355-360	<2	<2		
	WB-8 360-365	<2	<2		
	WB-8 365-370	<2	<2		
	WB-8 370-375	<2	<2		
	WB-8 375-380	<2	<2		
	WB-8 380-385	<2	<2		
	WB-8 385-390	<2	<2		
	WB-8 390-395	25	<2		
	WB-9 0-5	38	<2		
	WB-9 5-10	30	65		
	WB-9 10-15	21	<2		
	WB-9 15-20	<2	<2		
	WB-9 20-25	4	<2		
	WB-9 25-30	<2	<2		
	WB-9 30-35	6	<2		
	WB-9 35-40	3	<2		

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 18
SPARKS, NEVADA 89431
PHONE: (702) 358-1168

BARRINGER LABORATORIES INC.

14-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski

Project : SK

Purchase order :

Job: 89880R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-9 40-45	2	<2
	WB-9 45-50	3	<2
	WB-9 50-55	<2	<2
	WB-9 55-60	9	<2
	WB-9 60-65	7	<2
	WB-9 65-70	6	<2
	WB-9 70-75	10	<2
	WB-9 75-80	8	<2
	WB-9 80-85	3	<2
	WB-9 85-90	<2	<2
	WB-9 90-95	<2	<2
	WB-9 95-100	17	<2
	WB-9 100-105	3	<2
	WB-9 105-110	<2	<2
	WB-9 110-115	<2	<2
	WB-9 115-120	<2	<2
	WB-9 120-125	<2	<2
	WB-9 125-130	<2	<2
	WB-9 130-135	<2	<2
	WB-9 135-140	<2	<2
	WB-9 140-145	<2	24
	WB-9 145-150	<2	<2
	WB-9 150-155	<2	<2
	WB-9 155-160	3	<2
	WB-9 160-165	<2	<2
	WB-9 165-170	11	<2
	WB-9 170-175	9	<2
	WB-9 175-180	<2	<2
	WB-9 180-185	<2	<2

JUN 14 1989 05:01 PM *Barringer Labs, Inc. FILED

BARRINGER LABORATORIES INC.

16000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1667

1455 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 350-1156

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Dave Godlewski
Project : Sk

Purchase order :

Job: 89880R

Status: Final

Type	Sample	As ppm	Au ppb
		AA	FA
Cut	WB-9 185-190	<2	<2
	WB-9 190-195	<2	<2
	WB-9 195-200	<2	5
	WB-9 200-205	<2	<2
	WB-9 205-210	3	<2
	WB-9 210-215	5	<2
	WB-9 215-220	20	<2
	WB-9 220-225	4	<2
	WB-9 225-230	<2	<2
	WB-9 230-235	<2	<2
	WB-9 235-240	<2	<2
	WB-9 240-245	10	<2
	WB-9 245-250	3	<2
	WB-9 250-255	<2	<2
	WB-9 255-260	3	<2
	WB-9 260-265	60	<2
	WB-9 265-270	3	<2
	WB-9 270-275	6	<2
	WB-9 275-280	<2	<2
	WB-9 280-285	<2	<2
	WB-9 285-290	<2	<2
	WB-9 290-295	<2	<2
	WB-9 295-300	<2	<2
	WB-9 300-305	3	<2
	WB-9 305-310	<2	<2
	WB-9 310-315	<2	<2
	WB-9 315-320	<2	15
	WB-9 320-325	5	<2
	WB-9 325-330	<2	<2

46. 14. 89 05:01 PM Barringer Labs, Inc. F06

BARRINGER LABORATORIES INC.

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1827

1466 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 368-1166

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

14-Jun-89

Page: 6
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski

Project : Sk

Purchase order :

Job: 89880R

Status: Final

Type	Sample	As ppm	Au ppb
		As	Au
		AA	FA
Cut	WB-9 330-335	<2	<2
	WB-9 335-340	<2	<2
	WB-9 340-345	<2	<2
	WB-9 345-350	4	<2
	WB-9 350-355	<2	<2
	WB-9 355-360	<2	<2
	WB-9 360-365	<2	<2
	WB-9 365-370	<2	<2
	WB-9 370-375	3	<2
	WB-9 375-380	4	<2
	WB-9 380-385	6	<2
	WB-9 385-390	6	<2
	WB-9 390-395	9	<2

Up. 14. 89 05:01 PM Barringer Labs, Inc. FJW



BARRINGER LABORATORIES INC.

16000 W. 4TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1456 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 362-1168

14-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 7
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : Sk

Purchase order :

Job: 89880R

Status: Final

Abbreviations:

Analyses:

AS : Arsenic
Au : Gold

Methods:

AA : Atomic Absorption
FA : Fire Assay

Units:

ppm : Parts per million
ppb : Parts per billion

Quality control:

< : less than

Signed:

.....
Vernon K. Peterson
Laboratory Manager



BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1456 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 368-1158

15-Jun-89

Page: 1
Copy: 2 of 2
Set : 1

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-10 0-5	22	<2
	WB-10 5-10	72	<2
	WB-10 10-15	37	<2
	WB-10 15-20	56	<2
	WB-10 20-25	178	<2
	WB-10 25-30	85	<2
	WB-10 30-35	32	<2
	WB-10 35-40	46	<2
	WB-10 40-45	29	<2
	WB-10 45-50	8	<2
	WB-10 50-55	5	<2
	WB-10 55-60	7	<2
	WB-10 60-65	26	<2
	WB-10 65-70	14	<2
	WB-10 70-75	13	<2
	WB-10 75-80	11	<2
	WB-10 80-85	10	<2
	WB-10 85-90	12	<2
	WB-10 90-95	4	<2
	WB-10 95-100	16	<2
	WB-10 100-105	14	<2
	WB-10 105-110	22	<2
	WB-10 110-115	16	<2
	WB-10 115-120	24	<2
	WB-10 120-125	13	<2
	WB-10 125-130	4	<2
	WB-10 130-135	11	<2
	WB-10 135-140	8	<2
	WB-10 140-145	37	<2



BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1466 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 358-1168

15-Jun-89

Page: 2
Copy: 2 of 2
Set: 1

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-10 145-150	18	<2
	WB-10 150-155	47	<2
	WB-10 155-160	21	<2
	WB-10 160-165	17	<2
	WB-10 165-170	26	<2
	WB-10 170-175	25	<2
	WB-10 175-180	25	<2
	WB-10 180-185	15	<2
	WB-10 185-190	20	<2
	WB-10 190-195	18	<2
	WB-10 195-200	13	<2
	WB-10 200-205	17	<2
	WB-10 205-210	94	<2
	WB-10 210-215	89	<2
	WB-10 215-220	104	<2
	WB-10 220-225	46	<2
	WB-10 225-230	44	<2
	WB-10 230-235	43	<2
	WB-10 235-240	46	<2
	WB-10 240-245	29	<2
	WB-10 245-250	44	<2
	WB-10 250-255	58	<2
	WB-10 255-260	150	<2
	WB-10 260-265	30	<2
	WB-10 265-270	40	<2
	WB-10 270-275	143	<2
	WB-10 275-280	151	<2
	WB-10 280-285	110	<2
	WB-10 285-290	23	<2



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1456 DEMING WAY, SUITE 1B
SPARKS, NEVADA 89431
PHONE: (702) 358-1156

15-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 2 of 2
Set: 1

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-10 290-295	28	<2
	WB-10 295-300	31	<2
	WB-10 300-305	32	<2
	WB-10 305-310	35	<2
	WB-10 310-315	58	<2
	WB-10 315-320	154	<2
	WB-10 320-325	39	<2
	WB-10 325-330	40	<2
	WB-10 330-335	214	24
	WB-10 335-340	137	16
	WB-10 340-345	217	4
	WB-10 345-350	89	<2
	WB-10 350-355	54	<2
	WB-10 355-360	3	<2
	WB-11 0-5	8	<2
	WB-11 5-10	34	<2
	WB-11 10-15	293	31
	WB-11 15-20	159	7
	WB-11 20-25	69	11
	WB-11 25-30	373	36
	WB-11 30-35	252	30
	WB-11 35-40	60	9
	WB-11 40-45	31	<2
	WB-11 45-50	14	<2
	WB-11 50-55	5	<2
	WB-11 55-60	3	<2
	WB-11 60-65	<2	<2
	WB-11 65-70	<2	<2
	WB-11 70-75	<2	<2



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1156

15-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 2 of 2
Set : 1

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-11 75-80	<2	<2
	WB-11 80-85	<2	<2
	WB-11 85-90	<2	<2
	WB-11 90-95	<2	<2
	WB-11 95-100	<2	<2
	WB-11 100-105	<2	<2
	WB-11 105-110	<2	<2
	WB-11 110-115	<2	<2
	WB-11 115-120	<2	<2
	WB-11 120-125	<2	<2
	WB-11 125-130	<2	<2
	WB-11 130-135	<2	<2
	WB-11 135-140	<2	<2
	WB-11 140-145	<2	<2
	WB-11 145-150	<2	<2
	WB-11 150-155	<2	<2
	WB-11 155-160	<2	<2
	WB-11 160-165	<2	<2
	WB-11 165-170	<2	<2
	WB-11 170-175	4	<2
	WB-11 175-180	<2	<2
	WB-11 180-185	<2	<2
	WB-11 185-190	<2	<2
	WB-11 190-195	<2	<2
	WB-11 195-200	<2	<2
	WB-11 200-205	<2	<2
	WB-11 205-210	<2	<2
	WB-11 210-215	<2	<2
	WB-11 215-220	<2	<2



BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1456 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

15-Jun-89

Page: 5
Copy: 2 of 2
Set: 1

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-11 220-225	<2	<2
	WB-12 0-5	330	151
	WB-12 5-10	98	3
	WB-12 10-15	48	<2
	WB-12 15-20	46	53
	WB-12 20-25	20	6
	WB-12 25-30	18	<2
	WB-12 30-35	42	9
	WB-12 35-40	38	4
	WB-12 40-45	47	3
	WB-12 45-50	28	<2
	WB-12 50-55	20	<2
	WB-12 55-60	46	<2
	WB-12 60-65	25	<2
	WB-12 65-70	35	<2
	WB-12 70-75	21	<2
	WB-12 75-80	24	<2
	WB-12 80-85	103	<2
	WB-12 85-90	102	<2
	WB-12 90-95	130	<2
	WB-12 95-100	17	<2
	WB-12 100-105	23	<2
	WB-12 105-110	38	<2
	WB-12 110-115	17	<2
	WB-12 115-120	15	<2
	WB-12 120-125	43	<2
	WB-12 125-130	32	<2
	WB-12 130-135	49	<2
	WB-12 135-140	55	<2



BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1466 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 358-1168

15-Jun-89

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-12 140-145	41	<2
	WB-12 145-150	58	<2
	WB-12 150-155	52	<2
	WB-12 155-160	89	<2
	WB-12 160-165	30	<2
	WB-12 165-170	15	<2
	WB-12 170-175	12	<2
	WB-12 175-180	17	<2
	WB-12 180-185	17	<2
	WB-12 185-190	8	<2
	WB-12 190-195	11	<2
	WB-12 195-200	14	<2
	WB-12 200-205	8	<2
	WB-12 205-210	11	<2
	WB-12 210-215	5	<2
	WB-12 215-220	13	<2
	WB-12 220-225	16	<2



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1887

1455 DEMING WAY, SUITE 16
SPARKS NEVADA 89431
PHONE (702) 368-1158

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 1 of 2
Set : 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-12 265-270	4	<2
	WB-12 270-275	3	<2
	WB-12 275-280	7	<2
	WB-12 280-285	8	<2
	WB-12 285-290	6	157
	WB-12 290-295	5	<2
	WB-12 295-300	4	<2
	WB-12 300-305	4	<2
	WB-12 305-310	<2	<2
	WB-12 310-315	<2	<2
	WB-12 315-320	7	<2
	WB-12 320-325	7	<2
	WB-12 325-330	2	<2
	WB-12 330-335	3	<2
	WB-12 335-340	<2	<2
	WB-12 340-345	2	<2
	WB-12 345-350	<2	<2
	WB-12 350-355	<2	<2
	WB-12 355-360	2	<2
	WB-12 360-365	5	<2
	WB-12 365-370	<2	<2
	WB-12 370-375	3	<2
	WB-12 375-380	2	<2
	WB-12 380-385	4	<2
	WB-12 385-390	3	<2
	WB-12 390-395	3	<2
	WB-13 0-5	120	30
	WB-13 5-10	105	70
	WB-13 10-15	142	<2



BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

1600 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 16
SPARKS NEVADA 89431
PHONE: (702) 358-1158

20-Jun-89

Page: 5
Copy: 1 of 2
Set : 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-13 15-20	104	18
	WB-13 20-25	64	10
	WB-13 25-30	1180	48
	WB-13 30-35	215	10
	WB-13 35-40	840	21
	WB-13 40-45	337	26
	WB-13 45-50	188	<2
	WB-13 50-55	142	13
	WB-13 55-60	294	53
	WB-13 60-65	1060	45
	WB-13 65-70	103	15
	WB-13 70-75	58	37
	WB-13 75-80	84	60
	WB-13 80-85	110	13
	WB-13 85-90	102	11
	WB-13 90-95	120	131
	WB-13 95-100	74	32
	WB-13 100-105	90	38
	WB-13 105-110	86	49
	WB-13 110-115	123	192
	WB-13 115-120	80	192
	WB-13 120-125	32	54
	WB-13 125-130	4	58
	WB-13 130-135	5	24
	WB-13 135-140	<2	13
	WB-13 140-145	4	4
	WB-13 145-150	2	7
	WB-13 150-155	16	54
	WB-13 155-160	6	<2

BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1887

1466 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 6
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-13 160-165	4	<2
	WB-13 165-170	3	<2
	WB-13 170-175	3	<2
	WB-13 175-180	3	<2
	WB-13 180-185	5	<2
	WB-13 185-190	31	<2
	WB-13 190-195	84	58
	WB-13 195-200	22	23
	WB-13 200-205	11	<2
	WB-13 205-210	50	16
	WB-13 210-215	87	516
	WB-13 215-220	12	25
	WB-13 220-225	6	45
	WB-13 225-230	12	<2
	WB-13 230-235	182	527
	WB-13 235-240	19	10
	WB-13 240-245	28	<2
	WB-13 245-250	29	15
	WB-13 250-255	25	214
	WB-13 255-260	28	98
	WB-13 260-265	32	<2
	WB-13 265-270	18	<2
	WB-13 270-275	28	10
	WB-13 275-280	15	11
	WB-13 280-285	23	77
	WB-13 285-290	16	14
	WB-13 290-295	20	<2
	WB-13 295-300	7	<2
	WB-13 300-305	9	<2



BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

16000 W. 8TH AVE., SUITE 320
GOLDEN, COLORADO 80401
PHONE: (303) 277-1587

1456 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1156

20-Jun-89

Page: 1
Copy: 1 of 2
Set : 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89922R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-14 0-5	107	28
	WB-14 5-10	72	8
	WB-14 10-15	70	9
	WB-14 15-20	99	13
	WB-14 20-25	470	94
	WB-14 25-30	193	17
	WB-14 30-35	372	15
	WB-14 35-40	279	81
	WB-14 40-45	227	14
	WB-14 45-50	79	6
	WB-14 50-55	128	4
	WB-14 55-60	56	17
	WB-14 60-65	56	11
	WB-14 65-70	66	10
	WB-14 70-75	28	6
	WB-14 75-80	22	3
	WB-14 80-85	41	8
	WB-14 85-90	81	4
	WB-14 90-95	98	<2
	WB-14 95-100	42	8
	WB-14 100-105	27	12
	WB-14 105-110	15	<2
	WB-14 110-115	27	<2
	WB-14 115-120	46	<2
	WB-14 120-125	20	<2
	WB-14 125-130	44	<2
	WB-14 130-135	31	<2
	WB-14 135-140	54	<2
	WB-14 140-145	33	<2



BARRINGER LABORATORIES INC.

16000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1807

1466 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 2
Copy: 1 of 2
Set: 1


Authority: David Godlewski
Project : SK

Purchase order :

Job: 89922R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-14 145-150	107	<2
	WB-14 150-155	29	<2
	WB-14 155-160	45	<2
	WB-14 160-165	41	<2
	WB-14 165-170	48	<2
	WB-14 170-175	78	<2
	WB-14 175-180	27	<2
	WB-14 180-185	1010	<2
	WB-14 185-190	258	<2
	WB-14 190-195	30	<2
	WB-14 195-200	82	<2
	WB-14 200-205	418	<2
	WB-14 205-210	371	<2
	WB-14 210-215	114	<2
	WB-14 215-220	M	M
	WB-14 220-225	M	M
	WB-14 225-230	96	172
	WB-14 230-235	48	29
	WB-14 235-240	40	28
	WB-14 240-245	60	33
	WB-14 245-250	45	12
	WB-14 250-255	33	8
	WB-14 255-260	58	11
	WB-14 260-265	84	13
	WB-14 265-270	55	5
	WB-14 270-275	69	10
	WB-14 275-280	53	10
	WB-14 280-285	770	2671
	WB-14 285-290	72	64

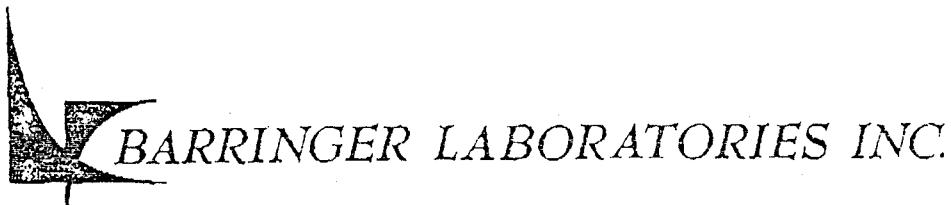

16000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 356-1158

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89922R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-14 290-295	39	32
	WB-14 295-300	30	12
	WB-14 300-305	23	11
	WB-14 305-310	34	26
	WB-14 310-315	37	16
	WB-14 315-320	29	5
	WB-14 320-325	21	5
	WB-14 325-330	13	6
	WB-14 330-335	10	<2
	WB-14 335-340	22	<2
	WB-14 340-345	11	<2
	WB-15 0-5	39	4
	WB-15 5-10	72	8
	WB-15 10-15	69	59
	WB-15 15-20	103	22
	WB-15 20-25	138	31
	WB-15 25-30	169	31
	WB-15 30-35	84	24
	WB-15 35-40	23	13
	WB-15 40-45	24	4
	WB-15 45-50	14	8
	WB-15 50-55	167	12
	WB-15 55-60	750	12
	WB-15 60-65	193	<2
	WB-15 65-70	54	10
	WB-15 70-75	82	14
	WB-15 75-80	59	4
	WB-15 80-85	48	<2
	WB-15 85-90	37	10



BARRINGER LABORATORIES INC.

15000 W. 5TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 358-1158

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89922R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-15 90-95	35	<2
	WB-15 95-100	21	3
	WB-15 100-105	39	42
	WB-15 105-110	54	<2
	WB-15 110-115	31	4
	WB-15 115-120	44	17
	WB-15 120-125	117	6
	WB-15 125-130	190	<2
	WB-15 130-135	88	<2
	WB-15 135-140	27	<2
	WB-15 140-145	24	<2
	WB-15 145-150	38	<2
	WB-15 150-155	32	<2
	WB-15 155-160	43	<2
	WB-15 160-165	32	4
	WB-15 165-170	59	3
	WB-15 170-175	23	6
	WB-15 175-180	32	5
	WB-15 180-185	37	10
	WB-15 185-190	24	5
	WB-15 190-195	34	6
	WB-15 195-200	41	19
	WB-15 200-205	39	21
	WB-15 205-210	61	<2
	WB-15 210-215	70	<2
	WB-15 215-220	365	<2
	WB-15 220-225	190	<2
	WB-15 225-230	109	<2
	WB-15 230-235	40	<2



BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1887

1465 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

20-Jun-89

Page: 5
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89922R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-15 235-240	82	<2
	WB-15 240-245	47	<2
	WB-15 245-250	43	<2
	WB-15 250-255	31	<2
	WB-15 255-260	54	17
	WB-15 260-265	66	45
	WB-15 265-270	205	119
	WB-15 270-275	96	39
	WB-15 275-280	74	29
	WB-15 280-285	33	11
	WB-15 285-290	60	34
	WB-15 290-295	49	8
	WB-15 295-300	215	109
	WB-15 300-305	330	74



BARRINGER LABORATORIES INC.

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1987

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 368-1168

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

27-Jun-89

Page: 1
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89979R

Status: Final

Type	Sample	As ppm	Au ppb
		AA	FA
Cut	WB-16 0-5	86	<2
	WB-16 5-10	101	3
	WB-16 10-15	184	17
	WB-16 15-20	283	33
	WB-16 20-25	269	21
	WB-16 25-30	324	12
	WB-16 30-35	326	5
	WB-16 35-40	560	21
	WB-16 40-45	252	19
	WB-16 45-50	243	36
	WB-16 50-55	242	298
	WB-16 55-60	260	39
	WB-16 60-65	209	64
	WB-16 65-70	197	46
	WB-16 70-75	196	42
	WB-16 75-80	40	<2
	WB-16 80-85	41	<2
	WB-16 85-90	35	<2
	WB-16 90-95	26	12
	WB-16 95-100	33	16
	WB-16 100-105	15	5
	WB-16 105-110	7	3
	WB-16 110-115	11	15
	WB-16 115-120	32	54
	WB-16 120-125	14	11
	WB-16 125-130	3	4
	WB-16 130-135	12	5
	WB-16 135-140	13	<2
	WB-16 140-145	4	4



BARRINGER LABORATORIES INC.

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 18
SPARKS, NEVADA 89431
PHONE: (702) 358-1156

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

27-Jun-89

Page: 2
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89979R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-16 145-150	3	5
	WB-16 150-155	16	6
	WB-16 155-160	<2	3
	WB-16 160-165	3	6
	WB-16 165-170	23	<2
	WB-16 170-175	38	8
	WB-16 175-180	3	6
	WB-16 180-185	4	9
	WB-17 0-5	4	<2
	WB-17 5-10	3	<2
	WB-17 10-15	<2	3
	WB-17 15-20	8	20
	WB-17 20-25	3	7
	WB-17 25-30	6	145
	WB-17 30-35	<2	7
	WB-17 35-40	9	26
	WB-17 40-45	18	6
	WB-17 45-50	27	40
	WB-17 50-55	27	21
	WB-17 55-60	3	17
	WB-17 60-65	4	6
	WB-17 65-70	26	11
	WB-17 70-75	<2	9
	WB-17 75-80	18	12
	WB-17 80-85	<2	10
	WB-17 85-90	4	11
	WB-17 90-95	9	8
	WB-17 95-100	13	7
	WB-17 100-105	39	8



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1087

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1154

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

27-Jun-89

Page: 3
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89979R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-17 105-110	14	6
	WB-17 110-115	24	10
	WB-17 115-120	21	3
	WB-17 120-125	42	<2
	WB-17 125-130	8	<2
	WB-17 130-135	3	<2
	WB-17 135-140	<2	4
	WB-17 140-145	<2	<2
	WB-17 145-150	6	10
	WB-17 150-155	28	20
	WB-17 155-160	38	251
	WB-17 160-165	10	14
	WB-17 165-170	23	<2
	WB-17 170-175	166	30
	WB-17 175-180	34	12
	WB-17 180-185	15	3
	WB-17 185-190	32	<2
	WB-17 190-195	25	5
	WB-17 195-200	6	98
	WB-17 200-205	3	<2
	WB-17 205-210	<2	<2
	WB-17 210-215	3	<2
	WB-17 215-220	4	65
	WB-17 220-225	3	27
	WB-17 225-230	5	9
	WB-17 230-235	<2	12
	WB-17 235-240	<2	13
	WB-17 240-245	8	3
	WB-17 245-250	7	53



BARRINGER LABORATORIES INC.

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 368-1158

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

27-Jun-89

Page: 4
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89979R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-17 250-255	3	22
	WB-17 255-260	3	77
	WB-17 260-265	4	33
	WB-17 265-270	4	21
	WB-17 270-275	<2	13
	WB-17 275-280	M	M
	WB-17 280-285	3	5
	WB-17 285-290	<2	41
	WB-17 290-295	<2	28
	WB-18 0-5	55	8
	WB-18 5-10	50	7
	WB-18 10-15	40	2
	WB-18 15-20	15	<2
	WB-18 20-25	100	3
	WB-18 25-30	59	<2
	WB-18 30-35	49	<2
	WB-18 35-40	74	4
	WB-18 40-45	39	3
	WB-18 45-50	47	<2
	WB-18 50-55	15	<2
	WB-18 55-60	48	<2
	WB-18 60-65	44	7
	WB-18 65-70	25	5
	WB-18 70-75	24	<2
	WB-18 75-80	17	<2
	WB-18 80-85	64	103
	WB-18 85-90	15	20
	WB-18 90-95	49	54
	WB-18 95-100	41	18



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

27-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 5
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89979R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-18 100-105	17	47
	WB-18 105-110	47	443
	WB-18 110-115	60	48
	WB-18 115-120	70	127
	WB-18 120-125	46	287
	WB-18 125-130	27	175
	WB-18 130-135	14	72
	WB-18 135-140	47	50
	WB-18 140-145	26	26
	WB-18 145-150	37	17
	WB-18 150-155	29	10
	WB-18 155-160	44	7
	WB-18 160-165	41	<2
	WB-18 165-170	46	<2
	WB-18 170-175	64	23



BARRINGER LABORATORIES INC.

16000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

29-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 2
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89980R Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-19 145-150	3	<2
	WB-19 150-155	<2	<2
	WB-19 155-160	<2	<2
	WB-19 160-165	<2	<2
	WB-19 165-170	<2	<2
	WB-19 170-175	<2	<2
	WB-19 175-180	3	<2
	WB-19 180-185	<2	<2
	WB-19 185-190	<2	<2
	WB-19 190-195	<2	<2
	WB-19 195-200	4	<2
	WB-19 200-205	11	<2
	WB-19 205-210	7	<2
	WB-19 210-215	<2	<2
	WB-19 215-220	<2	7
	WB-19 220-225	<2	<2
	WB-19 225-230	<2	17
	WB-19 230-235	4	2
	WB-19 235-240	6	4
	WB-19 240-245	2	5
	WB-20 0-5	172	16
	WB-20 5-10	75	<2
	WB-20 10-15	177	<2
	WB-20 15-20	98	<2
	WB-20 20-25	60	<2
	WB-20 25-30	214	18
	WB-20 30-35	324	26
	WB-20 35-40	57	<2
	WB-20 40-45	45	20



BARRINGER LABORATORIES INC.

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

29-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89980R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-20 45-50	63	<2
	WB-20 50-55	55	<2
	WB-20 55-60	57	<2
	WB-20 60-65	22	<2
	WB-20 65-70	33	<2
	WB-20 70-75	59	<2
	WB-20 75-80	153	<2
	WB-20 80-85	29	<2
	WB-20 85-90	12	<2
	WB-20 90-95	12	<2
	WB-20 95-100	30	<2
	WB-20 100-105	52	<2
	WB-20 105-110	110	<2
	WB-20 110-115	52	<2
	WB-20 115-120	26	<2
	WB-20 120-125	19	<2
	WB-20 125-130	3	<2
	WB-20 130-135	22	<2
	WB-20 135-140	41	<2
	WB-20 140-145	19	<2
	WB-20 145-150	19	<2
	WB-20 150-155	20	<2
	WB-20 155-160	19	<2
	WB-20 160-165	15	<2
	WB-20 165-170	201	<2
	WB-20 170-175	51	<2
	WB-20 175-180	<2	<2
	WB-20 180-185	50	<2
	WB-20 185-190	10	<2



BARRINGER LABORATORIES INC.

15000 W. 5TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 368-1158

29-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89980R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-20 190-195	13	<2
	WB-20 195-200	9	<2
	WB-20 200-205	54	<2
	WB-20 205-210	18	<2
	WB-20 210-215	14	<2
	WB-20 215-220	12	<2
	WB-20 220-225	50	<2
	WB-20 225-230	19	<2
	WB-20 230-235	22	<2
	WB-20 235-240	33	<2
	WB-20 240-245	150	<2
	WB-20 245-250	59	<2
	WB-20 250-255	3	<2
	WB-20 255-260	<2	<2
	WB-20 260-265	9	<2
	WB-20 265-270	6	<2
	WB-20 270-275	<2	<2
	WB-20 275-280	<2	<2
	WB-20 280-285	<2	<2
	WB-20 285-290	<2	<2
	WB-20 290-295	6	<2

15000 W. 5TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1987

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

26-Jun-89

Page: 1
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89963R

Status: Final

Type	Sample	Ag AA ppm	Au FA ppb
Cut	WB-21 0-5	<0.1	<2
	WB-21 5-10	<0.1	<2
	WB-21 10-15	<0.1	<2
	WB-21 15-20	<0.1	<2
	WB-21 20-25	<0.1	<2
	WB-21 25-30	<0.1	<2
	WB-21 30-35	<0.1	<2
	WB-21 35-40	<0.1	<2
	WB-21 40-45	<0.1	<2
	WB-21 45-50	<0.1	<2
	WB-21 50-55	<0.1	<2
	WB-21 55-60	<0.1	<2
	WB-21 60-65	<0.1	<2
	WB-21 65-70	<0.1	<2
	WB-21 70-75	<0.1	<2
	WB-21 75-80	<0.1	<2
	WB-21 80-85	<0.1	<2
	WB-21 85-90	<0.1	<2
	WB-21 90-95	<0.1	<2
	WB-21 95-100	<0.1	<2
	WB-21 100-105	<0.1	<2
	WB-21 105-110	<0.1	<2
	WB-21 110-115	<0.1	<2
	WB-21 115-120	<0.1	<2
	WB-21 120-125	<0.1	<2
	WB-21 125-130	<0.1	<2
	WB-21 130-135	<0.1	<2
	WB-21 135-140	<0.1	<2
	WB-21 140-145	<0.1	<2



BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1887

1466 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 356-1158

26-Jun-89

Page: 2
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89963R

Status: Final

Type	Sample	Ag ppm	Au ppb
Cut	WB-21 145-150	<0.1	<2
	WB-21 150-155	<0.1	<2
	WB-21 155-160	<0.1	<2
	WB-21 160-165	<0.1	<2
	WB-21 165-170	<0.1	<2
	WB-21 170-175	<0.1	<2
	WB-21 175-180	<0.1	<2
	WB-21 180-185	<0.1	<2
	WB-21 185-190	<0.1	<2
	WB-21 190-195	<0.1	<2
	WB-21 195-200	<0.1	<2
	WB-21 200-205	<0.1	<2
	WB-21 205-210	<0.1	<2
	WB-21 210-215	<0.1	<2
	WB-21 215-220	<0.1	<2
	WB-21 220-225	<0.1	<2
	WB-21 225-230	<0.1	<2
	WB-21 230-235	<0.1	<2
	WB-21 235-240	<0.1	<2
	WB-21 240-245	<0.1	<2
	WB-21 245-250	<0.1	<2
	WB-21 250-255	<0.1	<2
	WB-21 255-260	<0.1	<2
	WB-21 260-265	<0.1	<2
	WB-21 265-270	<0.1	<2
	WB-21 270-275	<0.1	<2
	WB-21 275-280	<0.1	<2
	WB-21 280-285	<0.1	<2
	WB-21 285-290	<0.1	<2



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1987

1456 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 358-1158

26-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89963R

Status: Final

Type	Sample	Ag ppm	Au ppb
Cut	WB-21 290-295	<0.1	<2
	WB-21 295-300	<0.1	<2
	WB-21 300-305	<0.1	<2
	WB-21 305-310	<0.1	<2
	WB-21 310-315	<0.1	<2
	WB-21 315-320	<0.1	<2
	WB-21 320-325	<0.1	<2
	WB-21 325-330	<0.1	<2
	WB-21 330-335	<0.1	<2
	WB-21 335-340	<0.1	<2
	WB-21 340-345	<0.1	<2
	WB-22 0-5	<0.1	<2
	WB-22 5-10	<0.1	<2
	WB-22 10-15	<0.1	<2
	WB-22 15-20	<0.1	<2
	WB-22 20-25	<0.1	<2
	WB-22 25-30	<0.1	<2
	WB-22 30-35	<0.1	6
	WB-22 35-40	<0.1	17
	WB-22 40-45	<0.1	4
	WB-22 45-50	<0.1	<2
	WB-22 50-55	<0.1	<2
	WB-22 55-60	<0.1	<2
	WB-22 60-65	<0.1	<2
	WB-22 65-70	<0.1	<2
	WB-22 70-75	<0.1	<2
	WB-22 75-80	<0.1	<2
	WB-22 80-85	<0.1	<2
	WB-22 85-90	<0.1	<2



BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1667

1466 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1168

26-Jun-89

Page: 4
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89963R

Status: Final

Type	Sample	Ag ppm	Au ppb
Cut	WB-22 90-95	<0.1	<2
	.WB-22 95-100	<0.1	<2
	WB-22 100-105	<0.1	<2
	WB-22 105-110	<0.1	<2
	WB-22 110-115	<0.1	<2
	WB-22 115-120	<0.1	<2
	WB-22 120-125	<0.1	<2
	WB-22 125-130	<0.1	<2
	WB-22 130-135	<0.1	<2
	WB-22 135-140	<0.1	<2
	WB-22 140-145	<0.1	<2
	WB-22 145-150	<0.1	<2
	WB-22 150-155	<0.1	<2
	WB-22 155-160	<0.1	<2
	WB-22 160-165	<0.1	<2
	WB-22 165-170	<0.1	<2
	WB-22 170-175	<0.1	<2
	WB-22 175-180	<0.1	<2
	WB-22 180-185	<0.1	<2
	WB-22 185-190	<0.1	<2
	WB-22 190-195	<0.1	<2

1400 6067
4 of 5

52
15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Item 7
A-5
Page: 6
Copy: 1 of 2
Set: 1

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Abbreviations:

Analyses:

Ag	: Silver
As	: Arsenic
Au	: Gold
Bi	: Bismuth
Sb	: Antimony

Methods:

AA	: Atomic Absorption
FA	: Fire Assay

Units:

ppm	: Parts per Million
ppb	: Parts per Billion

Quality control:

*=Interference	<=less than
>=greater than	D=not Detected
I=Insufficient sample	M=Missing
N=Not analyzed	P=questionable Precision
T=Trace	

signed:

Vernon K. Peterson
Laboratory Manager

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1587

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 368-1158

BARRINGER LABORATORIES INC.

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883359R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-1 0-5	0.2	550	62	8	8
	WB-1 5-10	0.6	560	31	10	7
	WB-1 10-15	1.4	640	42	5	3
	WB-1 15-20	1.2	660	88	7	4
	WB-1 20-25	1.2	1350	76	25	3
	WB-1 25-30	1	3080	279	37	3
	WB-1 30-35	2	6500	959	19	10
	WB-1 35-40	2.6	9900	1233	309	50
	WB-1 40-45	16.8	7700	1712	1750	66
	WB-1 45-50	1.5	1200	152	39	3
	WB-1 50-55	0.8	530	131	57	1
	WB-1 55-60	0.2	336	92	10	< 1
	WB-1 60-65	0.4	293	83	22	< 1
	WB-1 65-70	0.2	110	44	11	< 1
	WB-1 70-75	0.1	93	45	26	< 1
	WB-1 75-80	0.1	106	52	25	< 1
	WB-1 80-85	0.1	43	19	6	< 1
	WB-1 85-90	0.1	94	29	12	< 1
	WB-1 90-95	0.1	75	32	8	< 1
	WB-1 95-100A	0.1	122	43	11	< 1
	WB-1 95-100B	<	0.1	68	6	< 1
	WB-1 100-105	0.1	57	20	6	< 1
	WB-1 105-110	0.1	70	1164	12	< 1
	WB-1 110-115	<	0.1	83	13	< 1
	WB-1 115-120	<	0.1	51	7	< 1
	WB-1 120-125	<	0.1	27	2	< 1
	WB-1 125-130	<	0.1	27	2	< 1
	WB-1 130-135	M	M	M	M	M
	WB-1 135-140	0.1	52	12	2	< 1
	WB-1 140-145	0.1	45	20	4	< 1

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1987

1455 DESMING WAY, SUITE 15
SPARKS, NEVADA 89421
PHONE: (702) 362-1158

BARRINGER LABORATORIES INC.

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883359R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-1 145-150	0.1	76	15	12	< 1
	WB-1 150-155	0.1	38	13	9	< 1
	WB-1 155-160	< 0.1	27	3	6	< 1
	WB-1 160-165	< 0.1	54	5	6	< 1
	WB-1 165-170	< 0.1	39	6	12	< 1
	WB-1 170-175	< 0.1	38	9	7	< 1
	WB-1 175-180	< 0.1	10	< 2	< 2	< 1
	WB-1 180-185	< 0.1	7	< 2	< 2	< 1
	WB-1 185-190	< 0.1	6	< 2	< 2	< 1
	WB-1 190-195	< 0.1	9	< 2	< 2	< 1
	WB-1 195-200A	< 0.1	6	< 2	< 2	< 1
	WB-1 195-200B	1	117	570	< 2	< 1
	WB-1 200-205	0.1	10	5	< 2	< 1
	WB-1 205-210	0.1	13	4	< 2	< 1
	WB-1 210-215	< 0.1	14	< 2	< 2	< 1
	WB-1 215-220	< 0.1	21	< 2	< 2	< 1
	WB-1 220-225	< 0.1	16	< 2	< 2	< 1
	WB-1 225-230	< 0.1	< 2	< 2	< 2	< 1
	WB-1 230-235	0.1	3	< 2	< 2	< 1
	WB-1 235-240	0.1	3	< 2	< 2	< 1
	WB-1 240-245	< 0.1	4	< 2	< 2	< 1
	WB-1 245-250	0.1	14	< 2	< 2	< 1
	WB-1 250-255	< 0.1	6	< 2	< 2	< 1
	WB-1 255-260	< 0.1	4	< 2	< 2	< 1
	WB-1 260-265	< 0.1	9	< 2	< 2	< 1
	WB-1 265-270	< 0.1	5	< 2	< 2	< 1
	WB-1 270-275	< 0.1	4	< 2	< 2	< 1
	WB-1 275-280	< 0.1	3	< 2	< 2	< 1
	WB-1 280-285	0.1	29	64	< 2	< 1
	WB-1 285-290	0.1	4	47	< 2	< 1

1500 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1527

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 82431
PHONE: (702) 356-1158

BARRINGER LABORATORIES INC.

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

FINAL report: job number 883359R

Page: 3
Copy: 1 of 2
Set : 1

Purchase order :

Type	Sample	Ag AA	As AA	Au FA	Bi AA	Sb AA
		ppm	ppm	ppb	ppm	ppm
Cut	WB-1 290-295	< 0.1	4	6	< 2	< 1
	WB-1 295-300A	< 0.1	3	5	< 2	< 1
	WB-1 295-300B	< 0.1	< 2	< 2	< 2	< 1

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 358-1158



BARRINGER LABORATORIES INC.

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502


Page: 1
Copy: 1 of 2
Set : 1

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-2 0-5	0.1	15	< 2	< 2	< 1
	WB-2 5-10	0.1	76	< 2	< 2	< 1
	WB-2 10-15	0.2	63	< 2	< 2	< 1
	WB-2 15-20	0.2	67	< 2	< 2	< 1
	WB-2 20-25	0.1	13	< 2	< 2	< 1
	WB-2 25-30	0.1	20	< 2	< 2	< 1
	WB-2 30-35	0.2	21	< 2	< 2	< 1
	WB-2 35-40	0.1	16	< 2	< 2	< 1
	WB-2 40-45	0.3	19	< 2	< 2	< 1
	WB-2 45-50	< 0.1	14	< 2	< 2	< 1
	WB-2 50-55	0.1	10	< 2	< 2	< 1
	WB-2 55-60	0.1	20	< 2	< 2	< 1
	WB-2 60-65	0.1	5	< 2	< 2	< 1
	WB-2 65-70	0.1	7	< 2	< 2	< 1
	WB-2 70-75	< 0.1	8	< 2	< 2	< 1
	WB-2 75-80	0.1	11	< 2	< 2	< 1
	WB-2 80-85	< 0.1	12	< 2	< 2	< 1
	WB-2 85-90	0.2	17	< 2	< 2	< 1
	WB-2 90-95	< 0.1	11	< 2	< 2	< 1
	WB-2 95-100	< 0.1	6	< 2	< 2	< 1
	WB-2 100-105	< 0.1	4	< 2	< 2	< 1
	WB-2 105-110	< 0.1	7	< 2	< 2	< 1
	WB-2 110-115	< 0.1	4	< 2	< 2	< 1
	WB-2 115-120	0.1	7	< 2	< 2	< 1
	WB-2 120-125	0.1	6	< 2	< 2	< 1
	WB-2 125-130	< 0.1	11	< 2	< 2	< 1
	WB-2 130-135	0.1	10	< 2	< 2	< 1
	WB-2 135-140	< 0.1	26	< 2	< 2	< 1
	WB-2 140-145	< 0.1	18	< 2	< 2	< 1
	WB-2 145-150	< 0.1	10	< 2	< 2	< 1

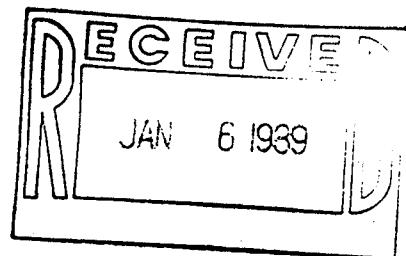

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502


Page: 2
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Type	Sample	Ag AA ppm	AS AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-2 150-155	0.2	14	< 2	< 2	< 1
	WB-2 155-160	0.1	7	< 2	< 2	< 1
	WB-2 160-165	0.1	11	< 2	< 2	< 1
	WB-2 165-170	0.2	7	< 2	< 2	< 1
	WB-2 170-175	0.2	6	< 2	< 2	< 1
	WB-2 175-180	0.2	11	< 2	< 2	< 1
	WB-2 180-185	0.1	17	< 2	< 2	< 1
	WB-2 185-190	0.2	27	< 2	26	< 1
	WB-2 190-195	0.1	17	< 2	11	< 1
	WB-2 195-200	0.1	9	< 2	< 2	< 1
	WB-2 200-205	0.1	3	< 2	< 2	< 1
	WB-2 205-210	0.1	6	< 2	< 2	< 1
	WB-2 210-215	< 0.1	6	< 2	< 2	< 1
	WB-2 215-220	0.1	24	< 2	< 2	< 1
	WB-2 220-225	0.1	13	< 2	< 2	< 1
	WB-2 225-230	0.1	7	< 2	< 2	< 1
	WB-2 230-235	0.2	11	< 2	< 2	< 1
	WB-2 235-240	0.1	13	< 2	< 2	< 1
	WB-2 240-245	0.1	14	< 2	< 2	< 1
	WB-2 245-250	0.2	4	< 2	< 2	< 1
	WB-2 250-255	0.2	11	< 2	< 2	< 1
	WB-2 255-260	0.1	6	< 2	< 2	< 1
	WB-2 260-265	0.1	5	< 2	< 2	< 1
	WB-2 265-270	0.2	5	< 2	< 2	< 1
	WB-2 270-275	0.1	3	< 2	< 2	< 1
	WB-2 275-280	0.1	2	< 2	< 2	< 1
	WB-2 280-285	0.2	7	< 2	< 2	< 1
	WB-2 285-290	0.2	4	< 2	< 2	< 1
	WB-2 290-295	0.1	8	< 2	< 2	< 1
	WB-2 295-300	0.2	10	< 2	< 2	< 1

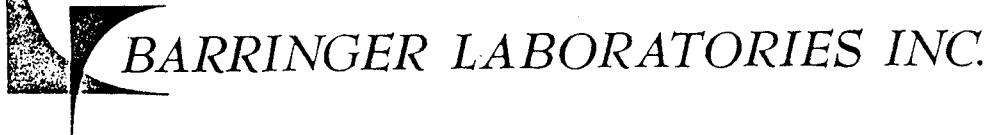

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set : 1

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-2 300-305	0.2	18	< 2	< 2	< 1
	WB-2 305-310	0.1	6	< 2	< 2	< 1
	WB-2 310-315	0.1	10	< 2	< 2	< 1
	WB-2 315-320	< 0.1	14	< 2	< 2	< 1
	WB-2 320-325	0.1	29	< 2	< 2	< 1
	WB-2 325-330	0.1	19	< 2	< 2	< 1
	WB-2 330-335	0.2	25	< 2	< 2	< 1
	WB-2 335-340	0.2	9	< 2	< 2	< 1
	WB-2 340-345	0.1	13	< 2	< 2	< 1
	WB-2 345-350	< 0.1	12	< 2	< 2	< 1
	WB-2 350-355	0.1	7	< 2	< 2	< 1
	WB-2 355-360	0.1	3	< 2	< 2	< 1
	WB-2 360-365	< 0.1	4	< 2	< 2	< 1
	WB-2 365-370	< 0.1	8	< 2	< 2	< 1
	WB-2 370-375	< 0.1	11	< 2	< 2	< 1
	WB-2 375-380	< 0.1	48	< 2	< 2	< 1
	WB-2 380-385	< 0.1	64	< 2	< 2	< 1
	WB-2 385-390	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 0-5	< 0.1	71	< 2	3	< 1
	WB-2A 5-10	< 0.1	65	12	9	< 1
	WB-2A 10-15	< 0.1	56	18	8	< 1
	WB-2A 15-20	< 0.1	46	33	5	< 1
	WB-2A 20-25	< 0.1	78	132	6	< 1
	WB-2A 25-30	< 0.1	32	99	5	< 1
	WB-2A 30-35	< 0.1	22	23	< 2	< 1
	WB-2A 35-40	< 0.1	37	47	4	< 1
	WB-2A 40-45	< 0.1	73	31	29	< 1
	WB-2A 45-50	< 0.1	34	6	4	< 1
	WB-2A 50-55	< 0.1	32	< 2	22	< 1
	WB-2A 55-60	< 0.1	46	< 2	9	< 1



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-2A 60-65	< 0.1	16	< 2	3	< 1
	WB-2A 65-70	< 0.1	13	< 2	2	< 1
	WB-2A 70-75	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 75-80	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 80-85	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 85-90	< 0.1	3	< 2	< 2	< 1
	WB-2A 90-95	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 95-100A	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 95-100B	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 100-105	< 0.1	3	< 2	< 2	< 1
	WB-2A 105-110	< 0.1	3	< 2	< 2	< 1
	WB-2A 110-115	< 0.1	14	< 2	< 2	< 1
	WB-2A 115-120	< 0.1	9	< 2	< 2	< 1
	WB-2A 120-125	< 0.1	3	< 2	< 2	< 1
	WB-2A 125-130	< 0.1	3	< 2	< 2	< 1
	WB-2A 130-135	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 135-140	< 0.1	4	< 2	< 2	< 1
	WB-2A 140-145	< 0.1	3	< 2	< 2	< 1
	WB-2A 145-150	< 0.1	7	< 2	< 2	< 1
	WB-2A 150-155	< 0.1	7	< 2	< 2	< 1
	WB-2A 155-160	< 0.1	5	< 2	< 2	< 1
	WB-2A 160-165	< 0.1	6	< 2	< 2	< 1
	WB-2A 165-170	< 0.1	9	< 2	< 2	< 1
	WB-2A 170-175	< 0.1	13	< 2	< 2	< 1
	WB-2A 175-180	< 0.1	51	< 2	< 2	< 1
	WB-2A 180-185	< 0.1	72	22	< 2	< 1
	WB-2A 185-190	< 0.1	70	9	< 2	< 1
	WB-2A 190-195	< 0.1	10	< 2	< 2	< 1
	WB-2A 195-200A	< 0.1	20	< 2	< 2	< 1

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 5
Copy: 1 of 2
Set : 1

Authority: Ron Long
Project :

Purchase order : 8255

FINAL report: job number 883369R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-2A 195-200B	< 0.1	18	< 2	< 2	< 1
	WB-2A 200-205	0.6	106	571	< 2	5
	WB-2A 205-210	< 0.1	28	< 2	< 2	< 1
	WB-2A 210-215	< 0.1	77	22	4	< 1
	WB-2A 215-220	< 0.1	51	14	3	< 1
	WB-2A 220-225	< 0.1	52	17	4	< 1
	WB-2A 230-235	< 0.1	10	< 2	< 2	< 1
	WB-2A 235-240	< 0.1	8	< 2	< 2	< 1
	WB-2A 240-245	< 0.1	21	< 2	< 2	< 1
	WB-2A 245-250	< 0.1	32	< 2	< 2	< 1
	WB-2A 250-255	< 0.1	25	< 2	< 2	< 1
	WB-2A 255-260	< 0.1	169	< 2	5	< 1
	WB-2A 260-265	< 0.1	56	< 2	3	< 1
	WB-2A 265-270	< 0.1	50	15	4	< 1
	WB-2A 270-275	< 0.1	377	21	4	< 1
	WB-2A 275-280	< 0.1	112	< 2	8	< 1
	WB-2A 280-285	< 0.1	36	< 2	3	< 1
	WB-2A 285-290	< 0.1	11	< 2	2	< 1
	WB-2A 290-295	< 0.1	8	< 2	2	< 1
	WB-2A 295-300A	< 0.1	16	< 2	2	< 1
	WB-2A 295-300B	< 0.1	< 2	< 2	< 2	< 1
	WB-2A 225-230	< 0.1	22	< 2	< 2	< 1



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 358-1158

5-Jan-88


Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

FINAL report: job number 883372R

Purchase order :

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-3 0-5	< 0.1	53	< 2	< 2	< 1
	WB-3 5-10	< 0.1	124	23	3	< 1
	WB-3 10-15	< 0.1	75	9	3	< 1
	WB-3 15-20	< 0.1	87	3	6	< 1
	WB-3 20-25	< 0.1	43	4	4	< 1
	WB-3 25-30	0.1	42	< 2	< 2	< 1
	WB-3 30-35	< 0.1	65	< 2	3	< 1
	WB-3 35-40	< 0.1	55	< 2	8	< 1
	WB-3 40-45	< 0.1	7	< 2	2	< 1
	WB-3 45-50	< 0.1	48	< 2	< 2	< 1
	WB-3 50-55	< 0.1	19	< 2	< 2	< 1
	WB-3 55-60	< 0.1	17	< 2	< 2	< 1
	WB-3 60-65	< 0.1	19	< 2	< 2	< 1
	WB-3 65-70	< 0.1	13	< 2	< 2	< 1
	WB-3 70-75	< 0.1	21	< 2	< 2	< 1
	WB-3 75-80	< 0.1	11	< 2	< 2	< 1
	WB-3 80-85	< 0.1	< 2	< 2	< 2	< 1
	WB-3 85-90	< 0.1	< 2	< 2	< 2	< 1
	WB-3 90-95	< 0.1	3	< 2	< 2	< 1
	WB-3 95-100A	< 0.1	< 2	< 2	< 2	< 1
	WB-3 95-100B	< 0.1	< 2	< 2	< 2	< 1
	WB-3 100-105	< 0.1	< 2	< 2	< 2	< 1
	WB-3 105-110	< 0.1	8	< 2	4	< 1
	WB-3 110-115	< 0.1	< 2	< 2	< 2	< 1
	WB-3 115-120	< 0.1	< 2	< 2	< 2	< 1
	WB-3 120-125	< 0.1	7	< 2	< 2	< 1
	WB-3 125-130	< 0.1	4	< 2	< 2	< 1
	WB-3 130-135	< 0.1	7	< 2	< 2	< 1
	WB-3 135-140	< 0.1	< 2	< 2	< 2	< 1
	WB-3 140-145	< 0.1	< 2	< 2	< 2	< 1

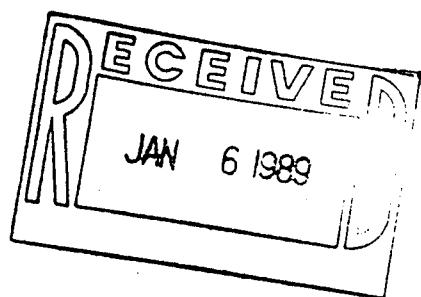



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

FINAL report: job number 883372R

Page: 2
Copy: 1 of 2
Set : 1

Purchase order :

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-3 145-150	< 0.1	< 2	< 2	< 2	< 1
	WB-3 150-155	0.1	6	< 2	< 2	< 1
	WB-3 155-160	< 0.1	< 2	< 2	< 2	< 1
	WB-3 160-165	0.1	< 2	< 2	< 2	< 1
	WB-3 165-170	0.1	< 2	< 2	< 2	< 1
	WB-3 170-175	< 0.1	< 2	< 2	< 2	< 1
	WB-3 175-180	0.1	4	< 2	< 2	< 1
	WB-3 180-185	0.2	3	< 2	< 2	< 1
	WB-3 185-190	< 0.1	3	< 2	< 2	< 1
	WB-3 190-195	< 0.1	4	< 2	< 2	< 1
	WB-3 195-200A	0.1	5	< 2	< 2	< 1
	WB-3 195-200B	1.1	100	488	< 2	3
	WB-3 200-205	< 0.1	3	< 2	< 2	< 1
	WB-3 205-210	< 0.1	< 2	< 2	< 2	< 1
	WB-3 210-215	< 0.1	< 2	< 2	< 2	< 1
	WB-3 215-220	< 0.1	15	< 2	< 2	< 1
	WB-3 220-225	< 0.1	14	< 2	< 2	< 1
	WB-3 225-230	< 0.1	7	< 2	< 2	< 1
	WB-3 230-235	< 0.1	3	< 2	< 2	< 1
	WB-3 235-240	0.1	6	< 2	< 2	< 1
	WB-3 240-245	< 0.1	6	< 2	< 2	< 1
	WB-3 245-250	< 0.1	7	< 2	< 2	< 1
	WB-3 250-255	< 0.1	< 2	< 2	< 2	< 1
	WB-3 255-260	0.1	< 2	< 2	< 2	< 1
	WB-3 260-265	< 0.1	4	< 2	< 2	< 1
	WB-3 265-270	< 0.1	< 2	< 2	< 2	< 1
	WB-3 270-275	< 0.1	4	< 2	< 2	< 1
	WB-3 275-280	< 0.1	3	< 2	< 2	< 1
	WB-3 280-285	< 0.1	< 2	< 2	< 2	< 1
	WB-3 285-290	< 0.1	< 2	< 2	< 2	< 1

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set : 1

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883372R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-3 290-295	< 0.1	4	< 2	< 2	< 1
	WB-3 295-300A	0.1	< 2	< 2	< 2	< 1
	WB-3 295-300B	< 0.1	< 2	< 2	< 2	< 1
	WB-3 300-305	< 0.1	3	< 2	< 2	< 1
	WB-3 305-310	< 0.1	< 2	< 2	< 2	< 1
	WB-3 310-315	< 0.1	8	< 2	< 2	< 1
	WB-3 315-320	0.1	< 2	< 2	< 2	< 1
	WB-3 320-325	M	M	M	M	M
	WB-3 325-330	M	M	M	M	M
	WB-3 330-335	M	M	M	M	M
	WB-3 335-340	M	M	M	M	M
	WB-4 140-145	< 0.1	26	< 2	< 2	< 1
	WB-4 145-150	0.1	26	23	< 2	< 1
	WB-4 150-155	< 0.1	30	8	< 2	< 1
	WB-4 155-160	0.1	84	72	5	< 1
	WB-4 160-165	0.1	37	19	3	< 1
	WB-4 165-170	< 0.1	22	10	2	< 1
	WB-4 170-175	< 0.1	62	17	< 2	< 1
	WB-4 175-180	0.1	25	4	< 2	< 1
	WB-4 180-185	< 0.1	38	3	2	< 1
	WB-4 185-190	< 0.1	71	17	< 2	< 1
	WB-4 190-195	< 0.1	9	5	< 2	< 1
	WB-4 195-200A	< 0.1	12	< 2	< 2	< 1
	WB-4 195-200B	1	95	483	< 2	5
	WB-4 200-205	< 0.1	15	8	< 2	< 1
	WB-4 205-210	< 0.1	12	< 2	5	< 1
	WB-4 210-215	< 0.1	21	< 2	< 2	< 1
	WB-4 215-220	0.1	39	< 2	2	< 1
	WB-4 220-225	0.1	23	< 2	< 2	< 1
	WB-4 225-230	< 0.1	29	< 2	< 2	< 1

12-Dec-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 1
Copy: 1 of 1
Set: 1

Authority: Anthony Longo
Project :

Purchase order :

~~██████████~~ report: job number 883276R

Final

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Hg HYG ppb	Sb AA ppm	Te AA ppm
Cut	-WB4 0-5	0.1	165	.028	3	142	< 1	< 0.1
	-WB4 5-10	0.1	203	.026	9	100	< 1	< 0.1
	-WB4 10-15	0.2	850	.061	9	71	< 1	< 0.1
	-WB4 15-20	0.1	1200	.086	10	41	< 1	< 0.1
10	-WB4 20-25	< 0.1	222	.021	7	65	< 1	< 0.1
	-WB4 25-30	0.1	268	.023	9	65	< 1	0.1
	-WB4 30-35	0.2	890	.454	16	47	< 1	0.1
	-WB4 35-40	0.1	580	.239	11	83	< 1	0.2
	-WB4 40-45	0.5	2100	1.096	210	53	< 1	0.2
	-WB4 45-50	0.1	1210	.259	28	71	< 1	0.1
	-WB4 50-55	0.1	630	.566	11	95	< 1	0.2
	-WB4 55-60	0.2	410	.307	6	154	< 1	0.1
	-WB4 60-65	0.2	240	.354	6	112	< 1	0.4
	-WB4 65-70	< 0.1	220	.124	4	59	< 1	0.3
10	-WB4 70-75	< 0.1	219	.012	2	77	< 1	0.2
	-WB4 75-80	< 0.1	99	.016	2	77	< 1	0.1
	-WB4 80-85	0.1	154	.140	2	65	< 1	0.1
	-WB4 85-90	< 0.1	50	.007	2	71	< 1	0.2
	-WB4 90-95	< 0.1	590	.076	4	59	< 1	0.2
	-WB4 95-100A	0.5	2100	.721	7	65	< 1	0.3
	-WB4 95-100B	0.1	83	.008	Blank	77	< 1	0.1
	-WB4 100-105	0.6	2160	.364	12	59	< 1	1.8
	-WB4 105-110	0.7	2050	.890	14	89	< 1	0.7
	-WB4 110-115	0.1	268	.052	3	100	< 1	0.2
9	-WB4 115-120	0.2	148	.580	14	83	< 1	0.5
	-WB4 120-125	0.1	265	.216	7	71	< 1	0.4
	-WB4 125-130	0.1	101	.119	4	65	< 1	0.2
	-WB4 130-135	< 0.1	66	.031	3	95	< 1	0.1
	-WB4 135-140	0.3	910	.417	51	71	< 1	0.3

1
27
29
29
CK

32
29
61

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

5-Jan-88

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883372R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB-4 230-235	0.2	43	142	5	< 1
	WB-4 235-240	0.2	29	12	3	< 1
	WB-4 240-245	< 0.1	29	21	5	< 1
	WB-4 245-250	< 0.1	28	24	3	< 1
	WB-4 250-255	< 0.1	32	< 2	6	< 1
	WB-4 255-260	0.1	40	< 2	4	1
	WB-4 260-265	0.1	29	< 2	3	< 1
	WB-4 265-270	0.1	59	< 2	5	< 1
	WB-4 270-275	< 0.1	29	< 2	< 2	< 1
	WB-4 275-280	< 0.1	27	< 2	< 2	< 1
	WB-4 280-285A	0.1	26	26	57	< 1
	WB-4 280-285B	< 0.1	< 2	< 2	< 2	< 1
	WB-4 285-290	0.1	19	13	25	< 1

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1667

1465 DEMING WAY, SUITE 15
SPARKS NEVADA 89431
PHONE (702) 358-1158

BARRINGER LABORATORIES INC.

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

Page: 1
Copy: 1 of 2
Set : 1

Purchase order :

FINAL report: job number 883375R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB5-5 0-5	< 0.1	31	41	3	< 1
	WB5-5 5-10	0.1	47	17	3	< 1
	WB5-5 10-15	0.1	33	27	4	< 1
	WB5-5 15-20	0.1	16	6	3	< 1
	WB5-5 20-25	0.1	63	< 2	19	< 1
	WB5-5 25-30	0.1	123	6	6	< 1
	WB5-5 30-35	< 0.1	60	10	< 2	< 1
	WB5-5 35-40	< 0.1	54	14	< 2	< 1
	WB5-5 40-45	0.1	74	30	< 2	< 1
	WB5-5 45-50	0.1	73	22	3	< 1
	WB5-5 50-55	< 0.1	42	16	3	< 1
	WB5-5 55-60	< 0.1	40	9	< 2	< 1
	WB5-5 60-65	< 0.1	52	< 5	< 2	< 1
	WB5-5 65-70	< 0.1	36	< 2	< 2	< 1
	WB5-5 70-75	0.1	83	12	5	< 1
	WB5-5 75-80	0.1	30	8	3	< 1
	WB5-5 80-85	0.1	28	25	3	< 1
	WB5-5 85-90	0.2	39	29	3	< 1
	WB5-5 90-95	0.8	265	272	9	< 1
	WB5-5 95-100A	0.2	83	67	10	< 1
	WB5-5 95-100B	< 0.1	< 2	3	< 2	< 1
	WB5-5 100-105	0.1	105	58	4	< 1
	WB5-5 105-110	0.2	72	151	2	< 1
	WB5-5 110-115	0.1	134	31	4	< 1
	WB5-5 115-120	0.1	68	13	2	< 1
	WB5-5 120-125	0.2	72	40	4	< 1
	WB5-5 125-130	0.2	123	137	6	< 1
	WB5-5 130-135	0.3	132	136	6	< 1
	WB5-5 135-140	< 0.1	79	19	2	< 1
	WB5-5 140-145	< 0.1	49	77	< 2	< 1

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1697

1455 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE (702) 366-1154

BARRINGER LABORATORIES INC.

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 2
Copy: 1 of 2
Set: 1

Authority: Ron Long
Project : 8255

Purchase order :

FINAL report: job number 883375R

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB5-5 145-150	0.1	590	181	< 2	< 1
	WB5-5 150-155	< 0.1	560	153	< 2	< 1
	WB5-5 155-160	0.2	351	465	11	< 1
	WB5-5 160-165	0.2	209	162	67	< 1
	WB5-5 165-170	0.1	104	89	20	< 1
	WB5-5 170-175	< 0.1	83	20	7	< 1
	WB5-5 175-180	< 0.1	35	22	< 2	< 1
	WB5-5 180-185	0.1	53	24	< 2	< 1
	WB5-5 185-190	0.1	44	18	2	< 1
	WB5-5 190-195	0.3	92	56	7	< 1
	WB5-5 195-200A	0.4	233	445	9	< 1
	WB5-5 195-200B	1	118	601	< 2	6
	WB5-5 200-205	0.2	110	90	4	< 1
	WB5-5 205-210	0.4	490	1199	37	< 1
	WB5-5 210-215	0.7	640	471	79	< 1
	WB5-5 215-220	0.8	690	2192	75	< 1
	WB5-5 220-225	0.2	106	183	32	< 1
	WB5-5 225-230	< 0.1	30	150	11	< 1
	WB5-5 230-235	< 0.1	31	87	8	< 1
	WB5-5 235-240	< 0.1	12	240	< 2	< 1
	WB5-5 240-245	< 0.1	23	51	4	< 1
	WB5-5 245-250	< 0.1	29	67	7	< 1
	WB5-5 250-255	< 0.1	15	242	6	< 1
	WB5-5 255-260	< 0.1	4	97	< 2	< 1
	WB5-5 260-265	< 0.1	5	97	< 2	< 1
	WB5-5 265-270	0.1	13	23	4	< 1
	WB5-5 270-275	< 0.1	8	15	4	< 1
	WB5-5 275-280	< 0.1	7	46	3	< 1
	WB5-5 280-285	< 0.1	6	31	3	< 1
	WB5-5 285-290	< 0.1	6	4	5	< 1

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE 303-277-1667

1456 DENVER WAY, SUITE 15
SPARKS NEVADA 89431
PHONE 702-356-1158

BARRINGER LABORATORIES INC.

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

FINAL report: job number 883375R

Purchase order :

Page: 3
Copy: 1 of 2
Set : 1

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB5-5 290-295	< 0.1	< 2	5	5	< 1
	WB5-5 295-300A	< 0.1	3	72	< 2	< 1
	WB5-5 295-300B	< 0.1	< 2	3	< 2	< 1
	WB5-5 300-305	< 0.1	7	8	< 2	< 1
	WB5-5 305-310	0.1	15	21	2	< 1
	WB5-5 310-315	0.1	32	28	5	< 1
	WB5-5 315-320	0.1	15	13	2	< 1
	WB5-5 320-325	< 0.1	15	< 2	< 2	< 1
	WB5-5 325-330	0.2	60	7	< 2	< 1
	WB5-5 330-335	0.2	30	9	< 2	< 1
	WB5-5 335-340		0.3	18	4	< 1
	WB5-5 340-345	<	0.1	16	54	< 1
	WB5-5 345-350	<	0.1	31	6	< 1
	WB5-5 350-355	<	0.1	28	22	< 1
	WB5-5 355-360	<	0.1	42	56	< 1
	WB5-5 360-365	<	0.1	59	125	11
	WB5-5 365-370	<	0.1	73	72	< 1
	WB5-5 370-375	<	0.1	45	3	< 1
	WB5-5 375-380	<	0.1	205	2	< 1
	WB5-5 380-385	<	0.1	66	62	20
	WB5-5 385-390	<	0.1	16	-2	< 1
	WB5-5 390-395	<	0.1	57	< 2	6
	WB5-5 395-400A	<	0.1	40	< 2	5
	WB5-5 395-400B	0.9	129	640	< 2	7
	WB5-5 400-405	< 0.1	35	7	< 2	< 1
	WB5-5 405-410	< 0.1	29	11	4	< 1
	WB5-5 410-415	< 0.1	50	< 2	2	< 1
	WB5-5 415-420	< 0.1	38	< 2	< 2	< 1
	WB5-5 420-425	< 0.1	65	< 2	3	< 1
	WB5-5 425-430	< 0.1	45	< 2	< 2	< 1

19000 W. 6TH AVE. SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1287

1468 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 364-1154

BARRINGER LABORATORIES INC.

5-Jan-89

Pegasus Gold Inc.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Ron Long
Project : 8255

FINAL report: job number 883375R

Page: 4
Copy: 1 of 2
Set: 1

Purchase order :

Type	Sample	Ag AA ppm	As AA ppm	Au FA ppb	Bi AA ppm	Sb AA ppm
Cut	WB5-5 430-435	< 0.1	21	< 2	< 2	< 1
	WB5-5 435-440	< 0.1	59	9	8	< 1
	WB5-5 440-445	< 0.1	20	7	5	< 1
	WB5-5 445-450	< 0.1	11	6	4	< 1
	WB5-5 450-455	< 0.1	10	2	2	< 1
	WB5-5 455-460	< 0.1	14	8	2	< 1
	WB5-5 460-465	< 0.1	15	11	10	< 1
	WB5-5 465-470	< 0.1	7	13	6	< 1
	WB5-5 470-475	< 0.1	7	< 2	2	< 1
	WB5-5 475-480	< 0.1	22	135	15	< 1
	WB5-5 480-485	< 0.1	15	10	9	< 1
	WB5-5 485-490	< 0.1	18	< 2	2	< 1
	WB5-5 490-495	< 0.1	6	< 2	2	< 1
	WB5-5 495-500A	< 0.1	10	< 2	2	< 1
	WB5-5 495-500B	< 0.1	< 2	< 2	2	< 1

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1657

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 1
Copy: 1 of 2
Set : 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-7 0-5	23	<2
	WB-7 5-10	25	<2
	WB-7 10-15	24	<2
	WB-7 15-20	23	<2
	WB-7 20-25	28	<2
	WB-7 25-30	26	<2
	WB-7 30-35	22	<2
	WB-7 35-40	17	<2
	WB-7 40-45	19	<2
	WB-7 45-50	17	<2
	WB-7 50-55	6	<2
	WB-7 55-60	13	<2
	WB-7 60-65	12	<2
	WB-7 65-70	11	<2
	WB-7 70-75	12	140
	WB-7 75-80	11	<2
	WB-7 80-85	20	<2
	WB-7 85-90	13	<2
	WB-7 90-95	14	<2
	WB-7 95-100	10	<2
	WB-7 100-105	13	<2
	WB-7 105-110	15	<2
	WB-7 110-115	13	<2
	WB-7 115-120	11	<2
	WB-7 120-125	15	<2
	WB-7 125-130	14	<2
	WB-7 130-135	9	<2
	WB-7 135-140	9	<2
	WB-7 140-145	6	<2

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1507

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 386-1150

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

20-Jun-89

Page: 2.
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-7 145-150	10	<2
	WB-7 150-155	7	<2
	WB-7 155-160	8	<2
	WB-7 160-165	10	<2
	WB-7 165-170	6	<2
	WB-7 170-175	7	<2
	WB-7 175-180	8	<2
	WB-7 180-185	10	<2
	WB-7 185-190	5	<2
	WB-7 190-195	5	<2
	WB-7 195-200	9	<2
	WB-7 200-205	8	<2
	WB-7 205-210	5	<2
	WB-7 210-215	6	<2
	WB-7 215-220	4	<2
	WB-7 220-225	6	<2
	WB-7 225-230	6	<2
	WB-7 230-235	6	<2
	WB-7 235-240	7	<2
	WB-7 240-245	7	<2
	WB-7 245-250	6	<2
	WB-7 250-255	5	<2
	WB-7 255-260	8	<2
	WB-7 260-265	5	<2
	WB-7 265-270	3	<2
	WB-7 270-275	5	<2
	WB-7 275-280	4	<2
	WB-7 280-285	5	<2
	WB-7 285-290	5	<2

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1627

1455 DEMING WAY SUITE 15
SPARKS NEVADA 89431
PHONE (702) 359-1150

BARRINGER LABORATORIES INC.

20-Jun-69

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-7 290-295	5	<2
	WB-7 295-300	4	<2
	WB-7 300-305	3	<2
	WB-7 305-310	<2	<2
	WB-7 310-315	4	<2
	WB-7 315-320	<2	<2
	WB-7 320-325	4	<2
	WB-7 325-330	9	<2
	WB-7 330-335	4	<2
	WB-7 335-340	5	<2
	WB-7 340-345	3	<2
	WB-7 345-350	4	<2
	WB-7 350-355	6	<2
	WB-7 355-360	4	<2
	WB-7 360-365	7	<2
	WB-7 365-370	4	<2
	WB-7 370-375	<2	<2
	WB-7 375-380	3	<2
	WB-7 380-385	4	<2
	WB-7 385-390	3	<2
	WB-7 390-395	<2	<2
	WB-12 225-230	6	<2
	WB-12 230-235	5	<2
	WB-12 235-240	3	<2
	WB-12 240-245	8	<2
	WB-12 245-250	2	<2
	WB-12 250-255	5	<2
	WB-12 255-260	5	<2
	WB-12 260-265	3	<2



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1657

1465 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 358-1154

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

14-Jun-89

Page: 1
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89880R Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-8 0-5	5	<2
	WB-8 5-10	6	3
	WB-8 10-15	49	2
	WB-8 15-20	3	<2
	WB-8 20-25	70	6
	WB-8 25-30	6	<2
	WB-8 30-35	9	4
	WB-8 35-40	<2	8
	WB-8 40-45	<2	2
	WB-8 45-50	<2	<2
	WB-8 50-55	4	5
	WB-8 55-60	27	3
	WB-8 60-65	14	<2
	WB-8 65-70	22	<2
	WB-8 70-75	20	<2
	WB-8 75-80	12	<2
	WB-8 80-85	13	<2
	WB-8 85-90	8	<2
	WB-8 90-95	4	2
	WB-8 95-100	2	4
	WB-8 100-105	4	<2
	WB-8 105-110	<2	<2
	WB-8 110-115	<2	<2
	WB-8 115-120	<2	<2
	WB-8 120-125	<2	<2
	WB-8 125-130	6	3
	WB-8 130-135	<2	<2
	WB-8 135-140	13	<2
	WB-8 140-145	5	<2



BARRINGER LABORATORIES INC.

18000 W. 6TH AVE., SUITE 200
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1435 DEMING WAY, SUITE 16
SPARKS NEVADA 89431
PHONE: (702) 356-1150

14-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 2
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski

Project : Sk

Purchase order :

Job: 89880R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-8 145-150	16	5
	WB-8 150-155	18	4
	WB-8 155-160	9	7
	WB-8 160-165	20	4
	WB-8 165-170	3	3
	WB-8 170-175	9	4
	WB-8 175-180	13	5
	WB-8 180-185	8	<2
	WB-8 185-190	3	<2
	WB-8 190-195	2	<2
	WB-8 195-200	<2	<2
	WB-8 200-205	<2	<2
	WB-8 205-210	<2	2
	WB-8 210-215	<2	<2
	WB-8 215-220	<2	<2
	WB-8 220-225	<2	<2
	WB-8 225-230	<2	<2
	WB-8 230-235	<2	<2
	WB-8 235-240	<2	<2
	WB-8 240-245	<2	<2
	WB-8 245-250	<2	<2
	WB-8 250-255	<2	<2
	WB-8 255-260	<2	<2
	WB-8 260-265	<2	<2
	WB-8 265-270	<2	<2
	WB-8 270-275	<2	<2
	WB-8 275-280	<2	<2
	WB-8 280-285	<2	<2
	WB-8 285-290	<2	<2



BARRINGER LABORATORIES INC.

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1456 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 366-1158

14-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : Sk

Purchase order :

Job: 89880R Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-8 290-295	<2	<2
	WB-8 295-300	<2	<2
	WB-8 300-305	<2	<2
	WB-8 305-310	<2	<2
	WB-8 310-315	<2	<2
	WB-8 315-320	<2	<2
	WB-8 320-325	<2	<2
	WB-8 325-330	<2	<2
	WB-8 330-335	<2	<2
	WB-8 335-340	<2	<2
	WB-8 340-345	<2	<2
	WB-8 345-350	<2	<2
	WB-8 350-355	<2	<2
	WB-8 355-360	<2	<2
	WB-8 360-365	<2	<2
	WB-8 365-370	<2	<2
	WB-8 370-375	<2	<2
	WB-8 375-380	<2	<2
	WB-8 380-385	<2	<2
	WB-8 385-390	<2	<2
	WB-8 390-395	25	<2
	WB-9 0-5	38	<2
	WB-9 5-10	30	65
	WB-9 10-15	21	<2
	WB-9 15-20	<2	<2
	WB-9 20-25	4	<2
	WB-9 25-30	<2	<2
	WB-9 30-35	6	<2
	WB-9 35-40	3	<2

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 18
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Dave Godlewski
Project : Sk

Purchase order :

Job: 89880R Status: Final

Type	Sample	As ppm	Au ppb
		As	Au
		AA	FA
Cut	WB-9 40-45	2	<2
	WB-9 45-50	3	<2
	WB-9 50-55	<2	<2
	WB-9 55-60	9	<2
	WB-9 60-65	7	<2
	WB-9 65-70	6	<2
	WB-9 70-75	10	<2
	WB-9 75-80	8	<2
	WB-9 80-85	3	<2
	WB-9 85-90	<2	<2
	WB-9 90-95	<2	<2
	WB-9 95-100	17	<2
	WB-9 100-105	3	<2
	WB-9 105-110	<2	<2
	WB-9 110-115	<2	<2
	WB-9 115-120	<2	<2
	WB-9 120-125	<2	<2
	WB-9 125-130	<2	<2
	WB-9 130-135	<2	<2
	WB-9 135-140	<2	<2
	WB-9 140-145	<2	24
	WB-9 145-150	<2	<2
	WB-9 150-155	<2	<2
	WB-9 155-160	3	<2
	WB-9 160-165	<2	<2
	WB-9 165-170	11	<2
	WB-9 170-175	9	<2
	WB-9 175-180	<2	<2
	WB-9 180-185	<2	<2

Page: 4
Copy: 1 of 2
Set : 1

14-Jun-89

BARRINGER LABORATORIES INC.

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1458 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE (702) 356-1152

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Authority: Dave Godlewski
Project : Sk

Purchase order :

Job: 89880R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-9 185-190	<2	<2
	WB-9 190-195	<2	<2
	WB-9 195-200	<2	5
	WB-9 200-205	<2	<2
	WB-9 205-210	3	<2
	WB-9 210-215	5	<2
	WB-9 215-220	20	<2
	WB-9 220-225	4	<2
	WB-9 225-230	<2	<2
	WB-9 230-235	<2	<2
	WB-9 235-240	<2	<2
	WB-9 240-245	10	<2
	WB-9 245-250	3	<2
	WB-9 250-255	<2	<2
	WB-9 255-260	3	<2
	WB-9 260-265	60	<2
	WB-9 265-270	3	<2
	WB-9 270-275	6	<2
	WB-9 275-280	<2	<2
	WB-9 280-285	<2	<2
	WB-9 285-290	<2	<2
	WB-9 290-295	<2	<2
	WB-9 295-300	<2	<2
	WB-9 300-305	3	<2
	WB-9 305-310	<2	<2
	WB-9 310-315	<2	<2
	WB-9 315-320	<2	15
	WB-9 320-325	5	<2
	WB-9 325-330	<2	<2



BARRINGER LABORATORIES INC.

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80431
PHONE: (303) 277-1527

1465 DEMING WAY, SUITE 15
SPARKS, NEVADA 80431
PHONE: (702) 356-1166

14-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 6
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : Sk

Purchase order :

Job: 89880R

Status: Final

Type	Sample	ppm	ppb
Cut	WB-9 330-335	<2	<2
	WB-9 335-340	<2	<2
	WB-9 340-345	<2	<2
	WB-9 345-350	4	<2
	WB-9 350-355	<2	<2
	WB-9 355-360	<2	<2
	WB-9 360-365	<2	<2
	WB-9 365-370	<2	<2
	WB-9 370-375	3	<2
	WB-9 375-380	4	<2
WB-9 380-385	6	<2	
WB-9 385-390	6	<2	
WB-9 390-395	9	<2	

BARRINGER LABORATORIES INC.

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1458 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 368-1168

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

14-Jun-89

Page: 7
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : Sk

Purchase order :

Job: 89880R

Status: Final

Abbreviations:

Analyses:

As : Arsenic
Au : Gold

Methods:

AA : Atomic Absorption
FA : Fire Assay

Units:

ppm : Parts per million
ppb : Parts per billion

Quality control:

< : less than

Signed:

.....
Vernon K. Peterson
Laboratory Manager

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1887

1456 COMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 368-1159

BARRINGER LABORATORIES INC.

15-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 1
Copy: 2 of 2
Set: 1

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-10 0-5	22	<2
	WB-10 5-10	72	<2
	WB-10 10-15	37	<2
	WB-10 15-20	56	<2
	WB-10 20-25	178	<2
	WB-10 25-30	85	<2
	WB-10 30-35	32	<2
	WB-10 35-40	46	<2
	WB-10 40-45	29	<2
	WB-10 45-50	8	<2
	WB-10 50-55	5	<2
	WB-10 55-60	7	<2
	WB-10 60-65	26	<2
	WB-10 65-70	14	<2
	WB-10 70-75	13	<2
	WB-10 75-80	11	<2
	WB-10 80-85	10	<2
	WB-10 85-90	12	<2
	WB-10 90-95	4	<2
	WB-10 95-100	16	<2
	WB-10 100-105	14	<2
	WB-10 105-110	22	<2
	WB-10 110-115	16	<2
	WB-10 115-120	24	<2
	WB-10 120-125	13	<2
	WB-10 125-130	4	<2
	WB-10 130-135	11	<2
	WB-10 135-140	8	<2
	WB-10 140-145	37	<2

1600 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1466 DEMING WAY SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

15-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 2
Copy: 2 of 2
Set : 1

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-10 145-150	18	<2
	WB-10 150-155	47	<2
	WB-10 155-160	21	<2
	WB-10 160-165	17	<2
	WB-10 165-170	26	<2
	WB-10 170-175	25	<2
	WB-10 175-180	25	<2
	WB-10 180-185	15	<2
	WB-10 185-190	20	<2
	WB-10 190-195	18	<2
	WB-10 195-200	13	<2
	WB-10 200-205	17	<2
	WB-10 205-210	94	<2
	WB-10 210-215	89	<2
	WB-10 215-220	104	<2
	WB-10 220-225	46	<2
	WB-10 225-230	44	<2
	WB-10 230-235	43	<2
	WB-10 235-240	46	<2
	WB-10 240-245	29	<2
	WB-10 245-250	44	<2
	WB-10 250-255	58	<2
	WB-10 255-260	150	<2
	WB-10 260-265	30	<2
	WB-10 265-270	40	<2
	WB-10 270-275	143	<2
	WB-10 275-280	151	<2
	WB-10 280-285	110	<2
	WB-10 285-290	23	<2

15000 W. 8TH AVE., SUITE 150
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1456 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 358-1156

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

15-Jun-89

Page: 3
Copy: 2 of 2
Set: 1

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R

Status: Final

Type	Sample	As AA	Au FA
		ppm	ppb
Cut	WB-10 290-295	28	<2
	WB-10 295-300	31	<2
	WB-10 300-305	32	<2
	WB-10 305-310	35	<2
	WB-10 310-315	58	<2
	WB-10 315-320	154	<2
	WB-10 320-325	39	<2
	WB-10 325-330	40	<2
	WB-10 330-335	214	24
	WB-10 335-340	137	16
	WB-10 340-345	217	4
	WB-10 345-350	89	<2
	WB-10 350-355	54	<2
	WB-10 355-360	3	<2
	WB-11 0-5	8	<2
	WB-11 5-10	34	<2
	WB-11 10-15	293	31
	WB-11 15-20	159	7
	WB-11 20-25	69	11
	WB-11 25-30	373	36
	WB-11 30-35	252	30
	WB-11 35-40	60	9
	WB-11 40-45	31	<2
	WB-11 45-50	14	<2
	WB-11 50-55	5	<2
	WB-11 55-60	3	<2
	WB-11 60-65	<2	<2
	WB-11 65-70	<2	<2
	WB-11 70-75	<2	<2

1500 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1667

1455 DEMING WAY SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 359-1156

BARRINGER LABORATORIES INC.

15-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 2 of 2
Set : 1

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-11 75-80	<2	<2
	WB-11 80-85	<2	<2
	WB-11 85-90	<2	<2
	WB-11 90-95	<2	<2
	WB-11 95-100	<2	<2
	WB-11 100-105	<2	<2
	WB-11 105-110	<2	<2
	WB-11 110-115	<2	<2
	WB-11 115-120	<2	<2
	WB-11 120-125	<2	<2
	WB-11 125-130	<2	<2
	WB-11 130-135	<2	<2
	WB-11 135-140	<2	<2
	WB-11 140-145	<2	<2
	WB-11 145-150	<2	<2
	WB-11 150-155	<2	<2
	WB-11 155-160	<2	<2
	WB-11 160-165	<2	<2
	WB-11 165-170	<2	<2
	WB-11 170-175	4	<2
	WB-11 175-180	<2	<2
	WB-11 180-185	<2	<2
	WB-11 185-190	<2	<2
	WB-11 190-195	<2	<2
	WB-11 195-200	<2	<2
	WB-11 200-205	<2	<2
	WB-11 205-210	<2	<2
	WB-11 210-215	<2	<2
	WB-11 215-220	<2	<2

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1897

1456 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 368-1156

BARRINGER LABORATORIES INC.

15-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 5
Copy: 2 of 2
Set: 1

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-11 220-225	<2	<2
	WB-12 0-5	330	151
	WB-12 5-10	98	3
	WB-12 10-15	48	<2
	WB-12 15-20	46	53
	WB-12 20-25	20	6
	WB-12 25-30	18	<2
	WB-12 30-35	42	9
	WB-12 35-40	38	4
	WB-12 40-45	47	3
	WB-12 45-50	28	<2
	WB-12 50-55	20	<2
	WB-12 55-60	46	<2
	WB-12 60-65	25	<2
	WB-12 65-70	35	<2
	WB-12 70-75	21	<2
	WB-12 75-80	24	<2
	WB-12 80-85	103	<2
	WB-12 85-90	102	<2
	WB-12 90-95	130	<2
	WB-12 95-100	17	<2
	WB-12 100-105	23	<2
	WB-12 105-110	38	<2
	WB-12 110-115	17	<2
	WB-12 115-120	15	<2
	WB-12 120-125	43	<2
	WB-12 125-130	32	<2
	WB-12 130-135	49	<2
	WB-12 135-140	55	<2

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1647

1466 DEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 358-1168

BARRINGER LABORATORIES INC.

15-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 6
Copy: 2 of 2
Set : 1

Authority: Dave Godleski
Project : SK

Purchase order :

Job: 89881R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-12 140-145	41	<2
	WB-12 145-150	58	<2
	WB-12 150-155	52	<2
	WB-12 155-160	89	<2
	WB-12 160-165	30	<2
	WB-12 165-170	15	<2
	WB-12 170-175	12	<2
	WB-12 175-180	17	<2
	WB-12 180-185	17	<2
	WB-12 185-190	8	<2
	WB-12 190-195	11	<2
	WB-12 195-200	14	<2
	WB-12 200-205	8	<2
	WB-12 205-210	11	<2
	WB-12 210-215	5	<2
	WB-12 215-220	13	<2
	WB-12 220-225	16	<2

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80431
PHONE (303) 277-1687

1455 DEMING WAY, SUITE 16
SPARKS NEVADA 89431
PHONE (702) 268-1156

BARRINGER LABORATORIES INC.

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 1 of 2
Set : 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-12 265-270	4	<2
	WB-12 270-275	3	<2
	WB-12 275-280	7	<2
	WB-12 280-285	8	<2
	WB-12 285-290	6	157
	WB-12 290-295	5	<2
	WB-12 295-300	4	<2
	WB-12 300-305	4	<2
	WB-12 305-310	<2	<2
	WB-12 310-315	<2	<2
	WB-12 315-320	7	<2
	WB-12 320-325	7	<2
	WB-12 325-330	2	<2
	WB-12 330-335	3	<2
	WB-12 335-340	<2	<2
	WB-12 340-345	2	<2
	WB-12 345-350	<2	<2
	WB-12 350-355	<2	<2
	WB-12 355-360	2	<2
	WB-12 360-365	5	<2
	WB-12 365-370	<2	<2
	WB-12 370-375	3	<2
	WB-12 375-380	2	<2
	WB-12 380-385	4	<2
	WB-12 385-390	3	<2
	WB-12 390-395	3	<2
	WB-13 0-5	120	30
	WB-13 5-10	105	70
	WB-13 10-15	142	<2

16000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE. (303) 277-1687

1405 DEMING WAY, SUITE 10
SPARKS NEVADA 89431
PHONE (702) 358-1156

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

20-Jun-89

Page: 5
Copy: 1 of 2
Set : 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-13 15-20	104	18
	WB-13 20-25	64	10
	WB-13 25-30	1180	48
	WB-13 30-35	215	10
	WB-13 35-40	840	21
	WB-13 40-45	337	26
	WB-13 45-50	188	<2
	WB-13 50-55	142	13
	WB-13 55-60	294	53
	WB-13 60-65	1060	45
	WB-13 65-70	103	15
	WB-13 70-75	58	37
	WB-13 75-80	84	60
	WB-13 80-85	110	13
	WB-13 85-90	102	11
	WB-13 90-95	120	131
	WB-13 95-100	74	32
	WB-13 100-105	90	38
	WB-13 105-110	86	49
	WB-13 110-115	123	192
	WB-13 115-120	80	192
	WB-13 120-125	32	54
	WB-13 125-130	4	58
	WB-13 130-135	5	24
	WB-13 135-140	<2	13
	WB-13 140-145	4	4
	WB-13 145-150	2	7
	WB-13 150-155	16	54
	WB-13 155-160	6	<2

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1887

1465 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1156

BARRINGER LABORATORIES INC.

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 6
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89921R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-13 160-165	4	<2
	WB-13 165-170	3	<2
	WB-13 170-175	3	<2
	WB-13 175-180	3	<2
	WB-13 180-185	5	<2
	WB-13 185-190	31	<2
	WB-13 190-195	84	58
	WB-13 195-200	22	23
	WB-13 200-205	11	<2
	WB-13 205-210	50	16
	WB-13 210-215	87	516
	WB-13 215-220	12	25
	WB-13 220-225	6	45
	WB-13 225-230	12	<2
	WB-13 230-235	182	527
	WB-13 235-240	19	10
	WB-13 240-245	28	<2
	WB-13 245-250	29	15
	WB-13 250-255	25	214
	WB-13 255-260	28	98
	WB-13 260-265	32	<2
	WB-13 265-270	18	<2
	WB-13 270-275	28	10
	WB-13 275-280	15	11
	WB-13 280-285	23	77
	WB-13 285-290	16	14
	WB-13 290-295	20	<2
	WB-13 295-300	7	<2
	WB-13 300-305	9	<2

16500 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1527

1455 DEMING WAY, SUITE 15
SPARKS NEVADA 89431
PHONE: (702) 322-1156

BARRINGER LABORATORIES INC.

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 1
Copy: 1 of 2
Set : 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89922R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-14 0-5	107	28
	WB-14 5-10	72	8
	WB-14 10-15	70	9
	WB-14 15-20	99	13
	WB-14 20-25	470	94
	WB-14 25-30	193	17
	WB-14 30-35	372	15
	WB-14 35-40	279	81
	WB-14 40-45	227	14
	WB-14 45-50	79	6
	WB-14 50-55	128	4
	WB-14 55-60	56	17
	WB-14 60-65	56	11
	WB-14 65-70	66	10
	WB-14 70-75	28	6
	WB-14 75-80	22	3
	WB-14 80-85	41	8
	WB-14 85-90	81	4
	WB-14 90-95	98	<2
	WB-14 95-100	42	8
	WB-14 100-105	27	12
	WB-14 105-110	15	<2
	WB-14 110-115	27	<2
	WB-14 115-120	46	<2
	WB-14 120-125	20	<2
	WB-14 125-130	44	<2
	WB-14 130-135	31	<2
	WB-14 135-140	54	<2
	WB-14 140-145	33	<2

15000 W. 6TH AVE., SUITE 200
GOLDEN, COLORADO 80401
PHONE (303) 277-1987

1466 DEERING WAY, SUITE 10
SPARKS, NEVADA 89431
PHONE (702) 862-1168

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

20-Jun-89

Page: 2
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89922R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-14 145-150	107	<2
	WB-14 150-155	29	<2
	WB-14 155-160	45	<2
	WB-14 160-165	41	<2
	WB-14 165-170	48	<2
	WB-14 170-175	78	<2
	WB-14 175-180	27	<2
	WB-14 180-185	1010	<2
	WB-14 185-190	258	<2
	WB-14 190-195	30	<2
	WB-14 195-200	82	<2
	WB-14 200-205	418	<2
	WB-14 205-210	371	<2
	WB-14 210-215	114	<2
	WB-14 215-220	M	M
	WB-14 220-225	M	M
	WB-14 225-230	96	172
	WB-14 230-235	48	29
	WB-14 235-240	40	28
	WB-14 240-245	60	33
	WB-14 245-250	45	12
	WB-14 250-255	33	8
	WB-14 255-260	58	11
	WB-14 260-265	84	13
	WB-14 265-270	55	5
	WB-14 270-275	69	10
	WB-14 275-280	53	10
	WB-14 280-285	770	2671
	WB-14 285-290	72	64

1500 W. 5TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1167

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 364-1158

BARRINGER LABORATORIES INC.

20-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89922R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-14 290-295	39	32
	WB-14 295-300	30	12
	WB-14 300-305	23	11
	WB-14 305-310	34	26
	WB-14 310-315	37	16
	WB-14 315-320	29	5
	WB-14 320-325	21	5
	WB-14 325-330	13	6
	WB-14 330-335	10	<2
	WB-14 335-340	22	<2
	WB-14 340-345	11	<2
	WB-15 0-5	39	4
	WB-15 5-10	72	8
	WB-15 10-15	69	59
	WB-15 15-20	103	22
	WB-15 20-25	138	31
	WB-15 25-30	169	31
	WB-15 30-35	84	24
	WB-15 35-40	23	13
	WB-15 40-45	24	4
	WB-15 45-50	14	8
	WB-15 50-55	167	12
	WB-15 55-60	750	12
	WB-15 60-65	193	<2
	WB-15 65-70	54	10
	WB-15 70-75	82	14
	WB-15 75-80	59	4
	WB-15 80-85	48	<2
	WB-15 85-90	37	10

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 362-1158

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

20-Jun-89

Page: 4
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89922R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-15 90-95	35	<2
	WB-15 95-100	21	3
	WB-15 100-105	39	42
	WB-15 105-110	54	<2
	WB-15 110-115	31	4
	WB-15 115-120	44	17
	WB-15 120-125	117	6
	WB-15 125-130	190	<2
	WB-15 130-135	88	<2
	WB-15 135-140	27	<2
	WB-15 140-145	24	<2
	WB-15 145-150	38	<2
	WB-15 150-155	32	<2
	WB-15 155-160	43	<2
	WB-15 160-165	32	4
	WB-15 165-170	59	3
	WB-15 170-175	23	6
	WB-15 175-180	32	5
	WB-15 180-185	37	10
	WB-15 185-190	24	5
	WB-15 190-195	34	6
	WB-15 195-200	41	19
	WB-15 200-205	39	21
	WB-15 205-210	61	<2
	WB-15 210-215	70	<2
	WB-15 215-220	365	<2
	WB-15 220-225	190	<2
	WB-15 225-230	109	<2
	WB-15 230-235	40	<2

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1987

1465 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 258-1156

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

20-Jun-89

Page: 5
Copy: 1 of 2
Set: 1

Authority: David Godlewski
Project : SK

Purchase order :

Job: 89922R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-15 235-240	82	<2
	WB-15 240-245	47	<2
	WB-15 245-250	43	<2
	WB-15 250-255	31	<2
	WB-15 255-260	54	17
	WB-15 260-265	66	45
	WB-15 265-270	205	119
	WB-15 270-275	96	39
	WB-15 275-280	74	29
	WB-15 280-285	33	11
	WB-15 285-290	60	34
	WB-15 290-295	49	8
	WB-15 295-300	215	109
	WB-15 300-305	330	74

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1287

1465 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 366-1166

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

27-Jun-89

Page: 1
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89979R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-16 0-5	86	<2
	WB-16 5-10	101	3
	WB-16 10-15	184	17
	WB-16 15-20	283	33
	WB-16 20-25	269	21
	WB-16 25-30	324	12
	WB-16 30-35	326	5
	WB-16 35-40	560	21
	WB-16 40-45	252	19
	WB-16 45-50	243	36
	WB-16 50-55	242	298
	WB-16 55-60	260	39
	WB-16 60-65	209	64
	WB-16 65-70	197	46
	WB-16 70-75	196	42
	WB-16 75-80	40	<2
	WB-16 80-85	41	<2
	WB-16 85-90	35	<2
	WB-16 90-95	26	12
	WB-16 95-100	33	16
	WB-16 100-105	15	5
	WB-16 105-110	7	3
	WB-16 110-115	11	15
	WB-16 115-120	32	54
	WB-16 120-125	14	11
	WB-16 125-130	3	4
	WB-16 130-135	12	5
	WB-16 135-140	13	<2
	WB-16 140-145	4	4

15000 W. 5TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1587

1455 DEMING WAY, SUITE 10
SPARKS NEVADA 89431
PHONE (702) 356-1154

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

27-Jun-89

Page: 2
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89979R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-16 145-150	3	5
	WB-16 150-155	16	6
	WB-16 155-160	<2	3
	WB-16 160-165	3	6
	WB-16 165-170	23	<2
	WB-16 170-175	38	8
	WB-16 175-180	3	6
	WB-16 180-185	4	9
	WB-17 0-5	4	<2
	WB-17 5-10	3	<2
	WB-17 10-15	<2	3
	WB-17 15-20	8	20
	WB-17 20-25	3	7
	WB-17 25-30	6	145
	WB-17 30-35	<2	7
	WB-17 35-40	9	26
	WB-17 40-45	18	6
	WB-17 45-50	27	40
	WB-17 50-55	27	21
	WB-17 55-60	3	17
	WB-17 60-65	4	6
	WB-17 65-70	26	11
	WB-17 70-75	<2	9
	WB-17 75-80	18	12
	WB-17 80-85	<2	10
	WB-17 85-90	4	11
	WB-17 90-95	9	8
	WB-17 95-100	13	7
	WB-17 100-105	39	8



BARRINGER LABORATORIES INC.

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1182

1455 DEMING WAY, SUITE 10
SPARKS, NEVADA 89431
PHONE: (702) 324-1114

27-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 3
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89979R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-17 105-110	14	6
	WB-17 110-115	24	10
	WB-17 115-120	21	3
	WB-17 120-125	42	<2
	WB-17 125-130	8	<2
	WB-17 130-135	3	<2
	WB-17 135-140	<2	4
	WB-17 140-145	<2	<2
	WB-17 145-150	6	10
	WB-17 150-155	28	20
	WB-17 155-160	38	251
	WB-17 160-165	10	14
	WB-17 165-170	23	<2
	WB-17 170-175	166	30
	WB-17 175-180	34	12
	WB-17 180-185	15	3
	WB-17 185-190	32	<2
	WB-17 190-195	25	5
	WB-17 195-200	6	98
	WB-17 200-205	3	<2
	WB-17 205-210	<2	<2
	WB-17 210-215	3	<2
	WB-17 215-220	4	65
	WB-17 220-225	3	27
	WB-17 225-230	5	9
	WB-17 230-235	<2	12
	WB-17 235-240	<2	13
	WB-17 240-245	8	3
	WB-17 245-250	7	53



BARRINGER LABORATORIES INC.

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1687

1456 DEMING WAY, SUITE 18
SPARKS, NEVADA 89431
PHONE (702) 368-1158

27-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89979R

Status: Final

Type	Sample	AS AA ppm	Au FA ppb
Cut	WB-17 250-255	3	22
	WB-17 255-260	3	77
	WB-17 260-265	4	33
	WB-17 265-270	4	21
	WB-17 270-275	<2	13
	WB-17 275-280	M	M
	WB-17 280-285	3	5
	WB-17 285-290	<2	41
	WB-17 290-295	<2	28
	WB-18 0-5	55	8
	WB-18 5-10	50	7
	WB-18 10-15	40	2
	WB-18 15-20	15	<2
	WB-18 20-25	100	3
	WB-18 25-30	59	<2
	WB-18 30-35	49	<2
	WB-18 35-40	74	4
	WB-18 40-45	39	3
	WB-18 45-50	47	<2
	WB-18 50-55	15	<2
	WB-18 55-60	48	<2
	WB-18 60-65	44	7
	WB-18 65-70	25	5
	WB-18 70-75	24	<2
	WB-18 75-80	17	<2
	WB-18 80-85	64	103
	WB-18 85-90	15	20
	WB-18 90-95	49	54
	WB-18 95-100	41	18

15000 W. 6TH AVE., SUITE 200
GOLDEN, COLORADO 80401
PHONE: (303) 277-1087

1455 OEMING WAY, SUITE 16
SPARKS, NEVADA 89431
PHONE: (702) 358-1156

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

27-Jun-89

Page: 5
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

PURCHASE ORDER :

Job: 89979R

Status: Final

Type	Sample	As ppm	Au ppb
		AA	FA
Cut	WB-18 100-105	17	47
	WB-18 105-110	47	443
	WB-18 110-115	60	48
	WB-18 115-120	70	127
	WB-18 120-125	46	287
	WB-18 125-130	27	175
	WB-18 130-135	14	72
	WB-18 135-140	47	50
	WB-18 140-145	26	26
	WB-18 145-150	37	17
	WB-18 150-155	29	10
	WB-18 155-160	44	7
	WB-18 160-165	41	<2
	WB-18 165-170	46	<2
	WB-18 170-175	64	23

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1587

1465 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 359-1158

BARRINGER LABORATORIES INC.

29-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 1
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89980R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-19 0-5	6	3
	WB-19 5-10	7	<2
	WB-19 10-15	<2	<2
	WB-19 15-20	3	<2
	WB-19 20-25	5	<2
	WB-19 25-30	16	<2
	WB-19 30-35	6	<2
	WB-19 35-40	3	<2
	WB-19 40-45	3	<2
	WB-19 45-50	10	<2
	WB-19 50-55	7	<2
	WB-19 55-60	5	<2
	WB-19 60-65	3	<2
	WB-19 65-70	26	<2
	WB-19 70-75	25	2
	WB-19 75-80	33	36
	WB-19 80-85	32	8
	WB-19 85-90	36	<2
	WB-19 90-95	15	<2
	WB-19 95-100	6	<2
	WB-19 100-105	3	<2
	WB-19 105-110	<2	<2
	WB-19 110-115	<2	<2
	WB-19 115-120	38	<2
	WB-19 120-125	4	<2
	WB-19 125-130	7	<2
	WB-19 130-135	16	<2
	WB-19 135-140	<2	<2
	WB-19 140-145	7	<2

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1687

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

29-Jun-89

Page: 3
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89980R

Status: Final

Type	Sample	As ppm	Au ppb
Cut	WB-20 45-50	63	<2
	WB-20 50-55	55	<2
	WB-20 55-60	57	<2
	WB-20 60-65	22	<2
	WB-20 65-70	33	<2
	WB-20 70-75	59	<2
	WB-20 75-80	153	<2
	WB-20 80-85	29	<2
	WB-20 85-90	12	<2
	WB-20 90-95	12	<2
	WB-20 95-100	30	<2
	WB-20 100-105	52	<2
	WB-20 105-110	110	<2
	WB-20 110-115	52	<2
	WB-20 115-120	26	<2
	WB-20 120-125	19	<2
	WB-20 125-130	3	<2
	WB-20 130-135	22	<2
	WB-20 135-140	41	<2
	WB-20 140-145	19	<2
	WB-20 145-150	19	<2
	WB-20 150-155	20	<2
	WB-20 155-160	19	<2
	WB-20 160-165	15	<2
	WB-20 165-170	201	<2
	WB-20 170-175	51	<2
	WB-20 175-180	<2	<2
	WB-20 180-185	50	<2
	WB-20 185-190	10	<2

15000 W. 5TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1987

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 358-1158

BARRINGER LABORATORIES INC.

29-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89980R

Status: Final

Type	Sample	As AA ppm	Au FA ppb
Cut	WB-20 190-195	13	<2
	WB-20 195-200	9	<2
	WB-20 200-205	54	<2
	WB-20 205-210	18	<2
	WB-20 210-215	14	<2
	WB-20 215-220	12	<2
	WB-20 220-225	50	<2
	WB-20 225-230	19	<2
	WB-20 230-235	22	<2
	WB-20 235-240	33	<2
	WB-20 240-245	150	<2
	WB-20 245-250	59	<2
	WB-20 250-255	3	<2
	WB-20 255-260	<2	<2
	WB-20 260-265	9	<2
	WB-20 265-270	6	<2
	WB-20 270-275	<2	<2
	WB-20 275-280	<2	<2
	WB-20 280-285	<2	<2
	WB-20 285-290	<2	<2
	WB-20 290-295	6	<2

15000 W. 5TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1887

1455 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE: (702) 356-1156

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

26-Jun-89

Page: 1
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89963R

Status: Final

Type	Sample	Ag AA ppm	Au FA ppb
Cut	WB-21 0-5	<0.1	<2
	WB-21 5-10	<0.1	<2
	WB-21 10-15	<0.1	<2
	WB-21 15-20	<0.1	<2
	WB-21 20-25	<0.1	<2
	WB-21 25-30	<0.1	<2
	WB-21 30-35	<0.1	<2
	WB-21 35-40	<0.1	<2
	WB-21 40-45	<0.1	<2
	WB-21 45-50	<0.1	<2
	WB-21 50-55	<0.1	<2
	WB-21 55-60	<0.1	<2
	WB-21 60-65	<0.1	<2
	WB-21 65-70	<0.1	<2
	WB-21 70-75	<0.1	<2
	WB-21 75-80	<0.1	<2
	WB-21 80-85	<0.1	<2
	WB-21 85-90	<0.1	<2
	WB-21 90-95	<0.1	<2
	WB-21 95-100	<0.1	<2
	WB-21 100-105	<0.1	<2
	WB-21 105-110	<0.1	<2
	WB-21 110-115	<0.1	<2
	WB-21 115-120	<0.1	<2
	WB-21 120-125	<0.1	<2
	WB-21 125-130	<0.1	<2
	WB-21 130-135	<0.1	<2
	WB-21 135-140	<0.1	<2
	WB-21 140-145	<0.1	<2

15000 W. 6TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1667

1466 DEMING WAY, SUITE 15
SPARKS, NEVADA 89431
PHONE (702) 366-1154

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

26-Jun-89

Page: 2
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89963R

Status: Final

Type	Sample	Ag ppm	Au ppb
Cut	WB-21 145-150	<0.1	<2
	WB-21 150-155	<0.1	<2
	WB-21 155-160	<0.1	<2
	WB-21 160-165	<0.1	<2
	WB-21 165-170	<0.1	<2
	WB-21 170-175	<0.1	<2
	WB-21 175-180	<0.1	<2
	WB-21 180-185	<0.1	<2
	WB-21 185-190	<0.1	<2
	WB-21 190-195	<0.1	<2
	WB-21 195-200	<0.1	<2
	WB-21 200-205	<0.1	<2
	WB-21 205-210	<0.1	<2
	WB-21 210-215	<0.1	<2
	WB-21 215-220	<0.1	<2
	WB-21 220-225	<0.1	<2
	WB-21 225-230	<0.1	<2
	WB-21 230-235	<0.1	<2
	WB-21 235-240	<0.1	<2
	WB-21 240-245	<0.1	<2
	WB-21 245-250	<0.1	<2
	WB-21 250-255	<0.1	<2
	WB-21 255-260	<0.1	<2
	WB-21 260-265	<0.1	<2
	WB-21 265-270	<0.1	<2
	WB-21 270-275	<0.1	<2
	WB-21 275-280	<0.1	<2
	WB-21 280-285	<0.1	<2
	WB-21 285-290	<0.1	<2

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE (303) 277-1987

1455 DEMING WAY, SUITE 15
SPARKS NEVADA 89431
PHONE (702) 358-1150

BARRINGER LABORATORIES INC.

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

26-Jun-89

Page: 3
Copy: 1 of 2
Set: 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89963R

Status: Final

Type	Sample	Ag AA ppm	Au FA ppb
Cut	WB-21 290-295	<0.1	<2
	WB-21 295-300	<0.1	<2
	WB-21 300-305	<0.1	<2
	WB-21 305-310	<0.1	<2
	WB-21 310-315	<0.1	<2
	WB-21 315-320	<0.1	<2
	WB-21 320-325	<0.1	<2
	WB-21 325-330	<0.1	<2
	WB-21 330-335	<0.1	<2
	WB-21 335-340	<0.1	<2
	WB-21 340-345	<0.1	<2
	WB-22 0-5	<0.1	<2
	WB-22 5-10	<0.1	<2
	WB-22 10-15	<0.1	<2
	WB-22 15-20	<0.1	<2
	WB-22 20-25	<0.1	<2
	WB-22 25-30	<0.1	<2
	WB-22 30-35	<0.1	6
	WB-22 35-40	<0.1	17
	WB-22 40-45	<0.1	4
	WB-22 45-50	<0.1	<2
	WB-22 50-55	<0.1	<2
	WB-22 55-60	<0.1	<2
	WB-22 60-65	<0.1	<2
	WB-22 65-70	<0.1	<2
	WB-22 70-75	<0.1	<2
	WB-22 75-80	<0.1	<2
	WB-22 80-85	<0.1	<2
	WB-22 85-90	<0.1	<2

15000 W. 8TH AVE., SUITE 300
GOLDEN, COLORADO 80401
PHONE: (303) 277-1667

1466 DEMING WAY, SUITE 15
SPARKS NEVADA 89431
PHONE: (702) 358-1152

BARRINGER LABORATORIES INC.

26-Jun-89

Pegasus Gold Corp.
230 South Rock Blvd.
Suite 30
Reno, NV 89502

Page: 4
Copy: 1 of 2
Set : 1

Authority: Dave Godlewski
Project : SK

Purchase order :

Job: 89963R Status: Final

Type	Sample	Ag AA ppm	Au FA ppb
Cut	WB-22 90-95	<0.1	<2
	WB-22 95-100	<0.1	<2
	WB-22 100-105	<0.1	<2
	WB-22 105-110	<0.1	<2
	WB-22 110-115	<0.1	<2
	WB-22 115-120	<0.1	<2
	WB-22 120-125	<0.1	<2
	WB-22 125-130	<0.1	<2
	WB-22 130-135	<0.1	<2
	WB-22 135-140	<0.1	<2
	WB-22 140-145	<0.1	<2
	WB-22 145-150	<0.1	<2
	WB-22 150-155	<0.1	<2
	WB-22 155-160	<0.1	<2
	WB-22 160-165	<0.1	<2
	WB-22 165-170	<0.1	<2
	WB-22 170-175	<0.1	<2
	WB-22 175-180	<0.1	<2
	WB-22 180-185	<0.1	<2
	WB-22 185-190	<0.1	<2
	WB-22 190-195	<0.1	<2